


Service
Service
Service

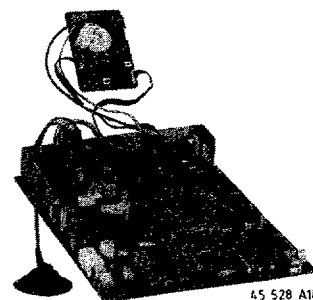

Service Manual

Table of contents



Page

2.	Technical specification and connections	2.1
3.	Warnings and remarks	3.1
4.	Mechanical instructions	4.1
5.	Detailed blockdiagram for fault diagnosis	5.1
6.	Electrical diagrams and print lay-outs	
	Controls (diagram A)	6.3
	Power supply and synchronisation (diagram B)	6.7
	Tuner, IF and source selection (diagram C)	6.11
	Video, sound and CRT panel (diagram D)	6.15
7.	Electrical adjustments	7.1
8.	List of error messages	8.1
9.	Operating instructions	9.1
10.	Spare parts list	10.1


Technical specification

Mains voltage	: 220-240 V \pm 10 %, 50 Hz \pm 5 %
Aerial input impedance	: 75 Ω - coax
Minimum aerial input VHF	: 30 μ V
Minimum aerial input UHF	: 40 μ V
Maximum aerial input	: 180mV
Pull-in range colour sync	: \pm 300Hz
Pull-in range horizontal sync	: \pm 600Hz
Pull-in range vertical sync	: \pm 5Hz
Picture tube range	: 14", 15", 17" and 21"

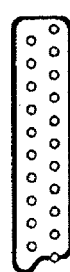

Euroconnector:

	1 -	Audio \oplus R (0,5V RMS \leq 1k Ω)
	2 -	Audio \ominus R (0,2 - 2V RMS \geq 10k Ω)
	3 -	Audio \oplus L (0,5V RMS \leq 1k Ω)
	4 -	Audio \perp
	5 -	Blue \perp
	6 -	Audio \ominus L (0,2 - 2V RMS \geq 10k Ω)
	7 -	Blue (0,7V _{pp} /75 Ω)
	8 -	CVBS-status 1 \ominus (0-2V int.)(10-12V ext.)
	9 -	Green \perp
	10 -	-
	11 -	Green (0,7V _{pp} /75 Ω)
	12 -	-
	13 -	Red \perp
	14 -	-
	15 -	Red (0,7V _{pp} /75 Ω)
	16 -	RGB-status (0-0,4V int.)(1-3V ext. 75 Ω)
	17 -	CVBS \perp
	18 -	CVBS \perp
	19 -	CVBS \oplus (1V _{pp} /75 Ω)
	20 -	CVBS \ominus (1V _{pp} /75 Ω)
	21 -	Earthscreen

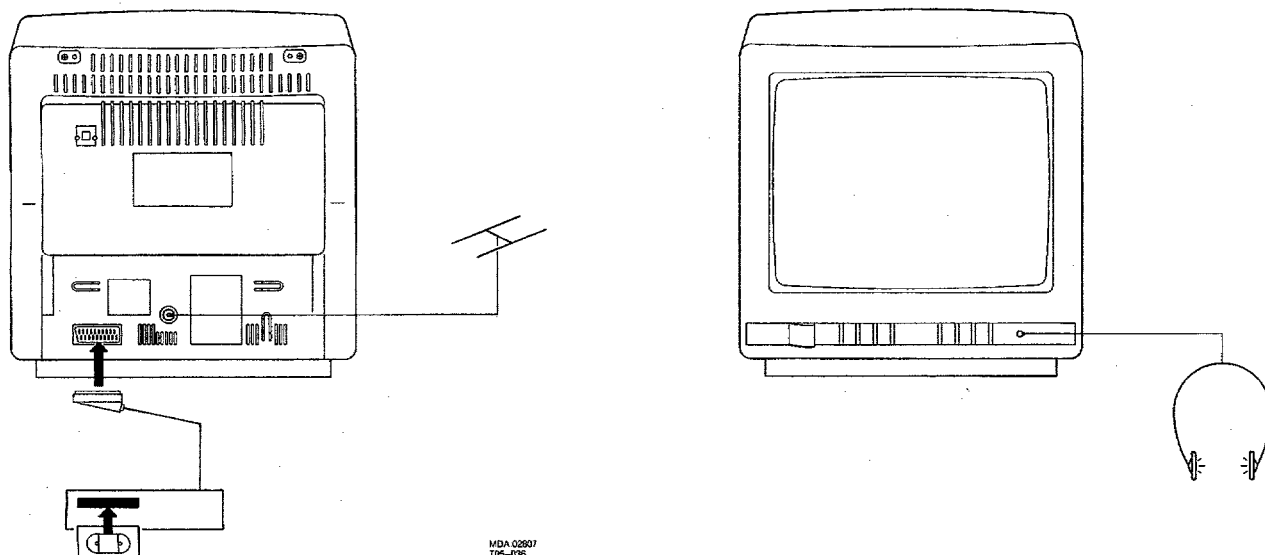Head phone: 8 - 1000 Ω 3.5 mm mini jack





MDA 02807
T05-036

1. A set to be repaired should always be connected to the mains via a suitable isolating transformer.
2. Safety regulations demand that the set be restored to its original condition and that components identical with the original types be used. Safety components are marked by the symbol .
3. To prevent damage to ICs and transistors any flash-over of the EHT should be avoided. To prevent damage to the picture tube the method, indicated in Fig. 1, has to be applied to discharge the picture tube. Make use of an EHT probe and a universal meter (position DC-V). Discharge until the reading of the meter is 0V (after approx. 30s).
4. **ESD** 
All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair may reduce life drastically.
When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance.
Keep components and tools on the same potential.
5. Together with the deflection unit and the possible multipole unit the flat square picture tubes applied form one whole. The deflection and multipole units have been adjusted optimally in the factory. Adjustment of these units during repair is thus not recommended.
6. The EHT cable has been bonded in the line output transformer. It can thus not be replaced.
7. Proceed with care when testing the EHT section and the picture tube.
8. Never replace any modules or any other parts while the set is switched on.
9. Wear safety goggles during replacement of the picture tube.
10. Use plastic instead of metal alignment tools. This in order to preclude short-circuit or to prevent a specific circuit from being rendered unstable.

1. Service default mode

The service default mode (SDM) is a fixed, defined state the set can be brought in. All controls are in a fixed position and the automatic switch-off feature is disabled. The set accepts all commands via the remote control or the local keyboard.

To switch on the SDM, connect pin 7 of IC7600 to ground and switch on the set with the mains switch. The SDM can be left by switching the set into stand-by or by switching off the set with the mains switch.

2. The direct voltages and waveforms should be measured relative to the nearest earthing point on the printed circuit board.
3. The direct voltages and oscillograms are measured with a switched on service default mode. Use a colour bar pattern of pattern generator PM5515 as input signal.
4. If necessary, the oscillograms and DC voltages are measured with  and without  aerial signal. Voltages in the power supply section have been measured for both normal operation (Ⓢ) and in the stand-by mode (Ⓢ). These values have been indicated by means of the corresponding symbols.
5. The components, mentioned in the parts lists, are per position completely interchangeable with the components in the set, irrespective of the possible type indications.
6. The picture tube board is provided with printed spark gaps. Each spark gap is arranged between an electrode of the picture tube and the aquadag coating.

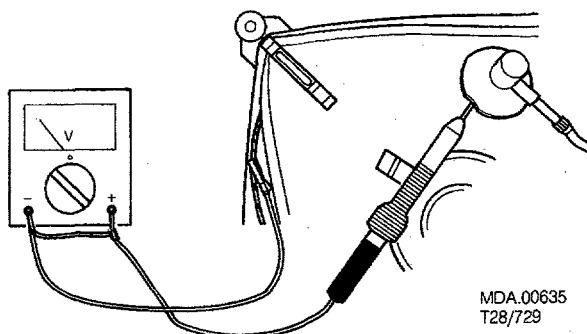


Fig. 1

7. Servicing of SMDs (Surface Mounted Devices)

7.1 General cautions on handling and storage.

- Oxidation on the SMDs terminals results in poor soldering. Do not handle SMDs with bare hands.
- Avoid for storage places that are sensitive to oxidation such as places with sulfur or chlorine gas, direct sunlight, high temperatures or a high degree of humidity.
As a result the capacitance or resistance value of the SMDs may be affected.
- Rough handling of circuit boards containing SMDs may cause damage to the components as well as the circuit boards. Circuit boards containing SMDs should never be bent or flexed. Different circuit board materials expand and contract at different rates when heated or cooled and the components and/or solder connections may be damaged due to the stress. Never rub or scrape chip components as this may cause the value of the component to change. Similarly, do not slide the circuit board across any surface.

7.2 Removal of SMDs

- Heat the solder (for 2-3 seconds) at each terminal of the chip. Small components can, by means of litz wire and a limited horizontal force, be removed with the soldering iron. They can also be removed with a solder sucker (see Fig. 2) or
- While holding the SMD with a pair of tweezers take it off gently using the soldering iron's heat applied to each terminal (see Fig. 2B).
- Remove the excess solder on the solder lands by means of litz wire or a solder sucker (see Fig. 2C).

Caution on removal:

- When handling the soldering iron, use suitable pressure and be careful.
- When removing the chip, do not use undue force with the pair of tweezers.
- The soldering iron to be used (approx. 30 W), must preferably be provided with a thermal control (soldering temperature about 225 to 250°C).
- The chip, once removed, must **never** be used again.

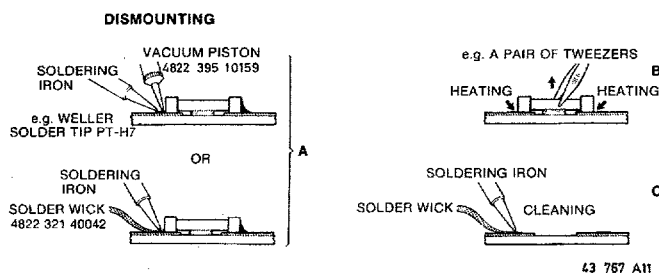


Fig. 2

7.3 Attachment of SMDs

- Locate the SMD on the solder lands by means of tweezers and solder the component at one side. Ensure that the component is positioned well on the solder lands (see Fig. 3A).
- Next complete the soldering of the terminals of the component (see Fig. 3B).

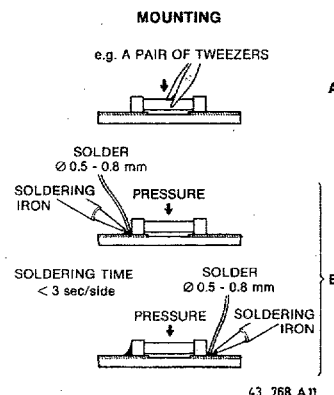


Fig. 3

Caution on attachment:

- When soldering the SMD terminals, do not touch them directly with the soldering iron. The soldering must be as quick as possible; care must be taken to avoid damage to the terminals and the body itself.
- Keep the SMD's body in contact with the printed board when soldering.
- The soldering iron to be used (approx. 30 W) must preferably be provided with a thermal control (soldering temperature about 225 to 250°C).
- Soldering should not be done outside the solder land.
- Soldering flux (of rosin) may be used but should not be acidic.
- After soldering, let the SMD cool down gradually at room temperature.
- The quantity of solder must be proportional with the size of the solder land. If the quantity is too great, the SMD might crack or the solder lands might be torn loose from the printed board (see Fig. 4).

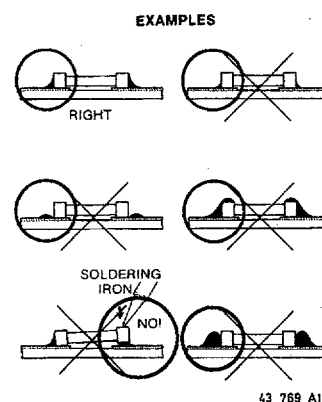


Fig. 4

1. Servicing position

To facilitate troubleshooting and repairing the set, the chassis can, after disconnection of the degaussing coil, be pulled out of the cabinet, turned 180°, and placed behind it (see Fig. 5).

2. Flat square picture tube fixation.

Demounting the picture tube:
Loosen the nuts by turning them with a box spanner hexagon (10 mm) **clockwise**, (see Fig. 6).

Mounting the picture tube:
Turn the spindles **counterclockwise** into the mask with a box spanner hexagon (4 mm).
Locate the picture tube in the mask. The easiest way is placing the cabinet with the front facing down.
Position the picture tube in the middle of the mask.
Turn the spindles **clockwise** until the nut can be fixed onto the spindle.
Turn the nut **counterclockwise** finger-tight against the picture tube fixation.
Turn the spindle **clockwise** until the whole has been fixed tightly (the nut must not turn any more).

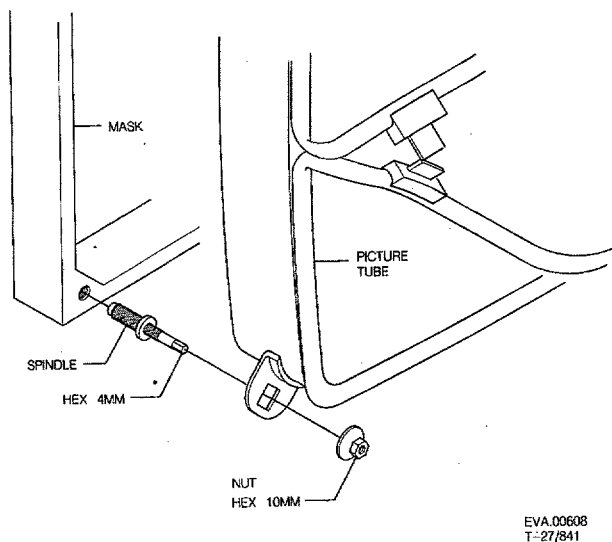
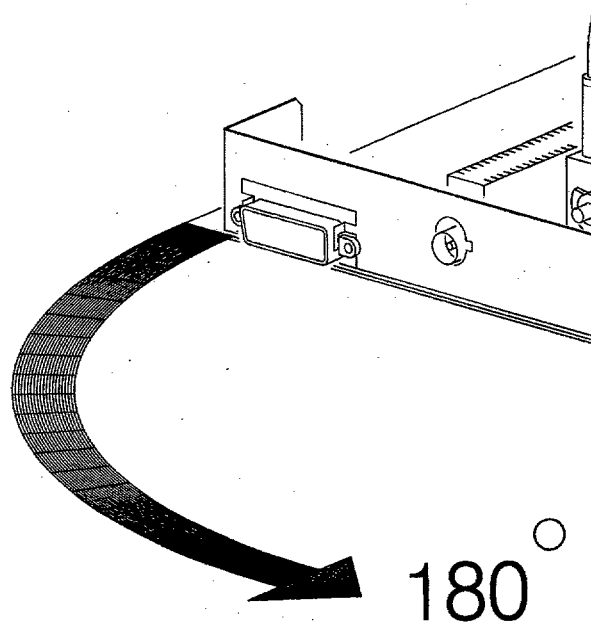


Fig. 6



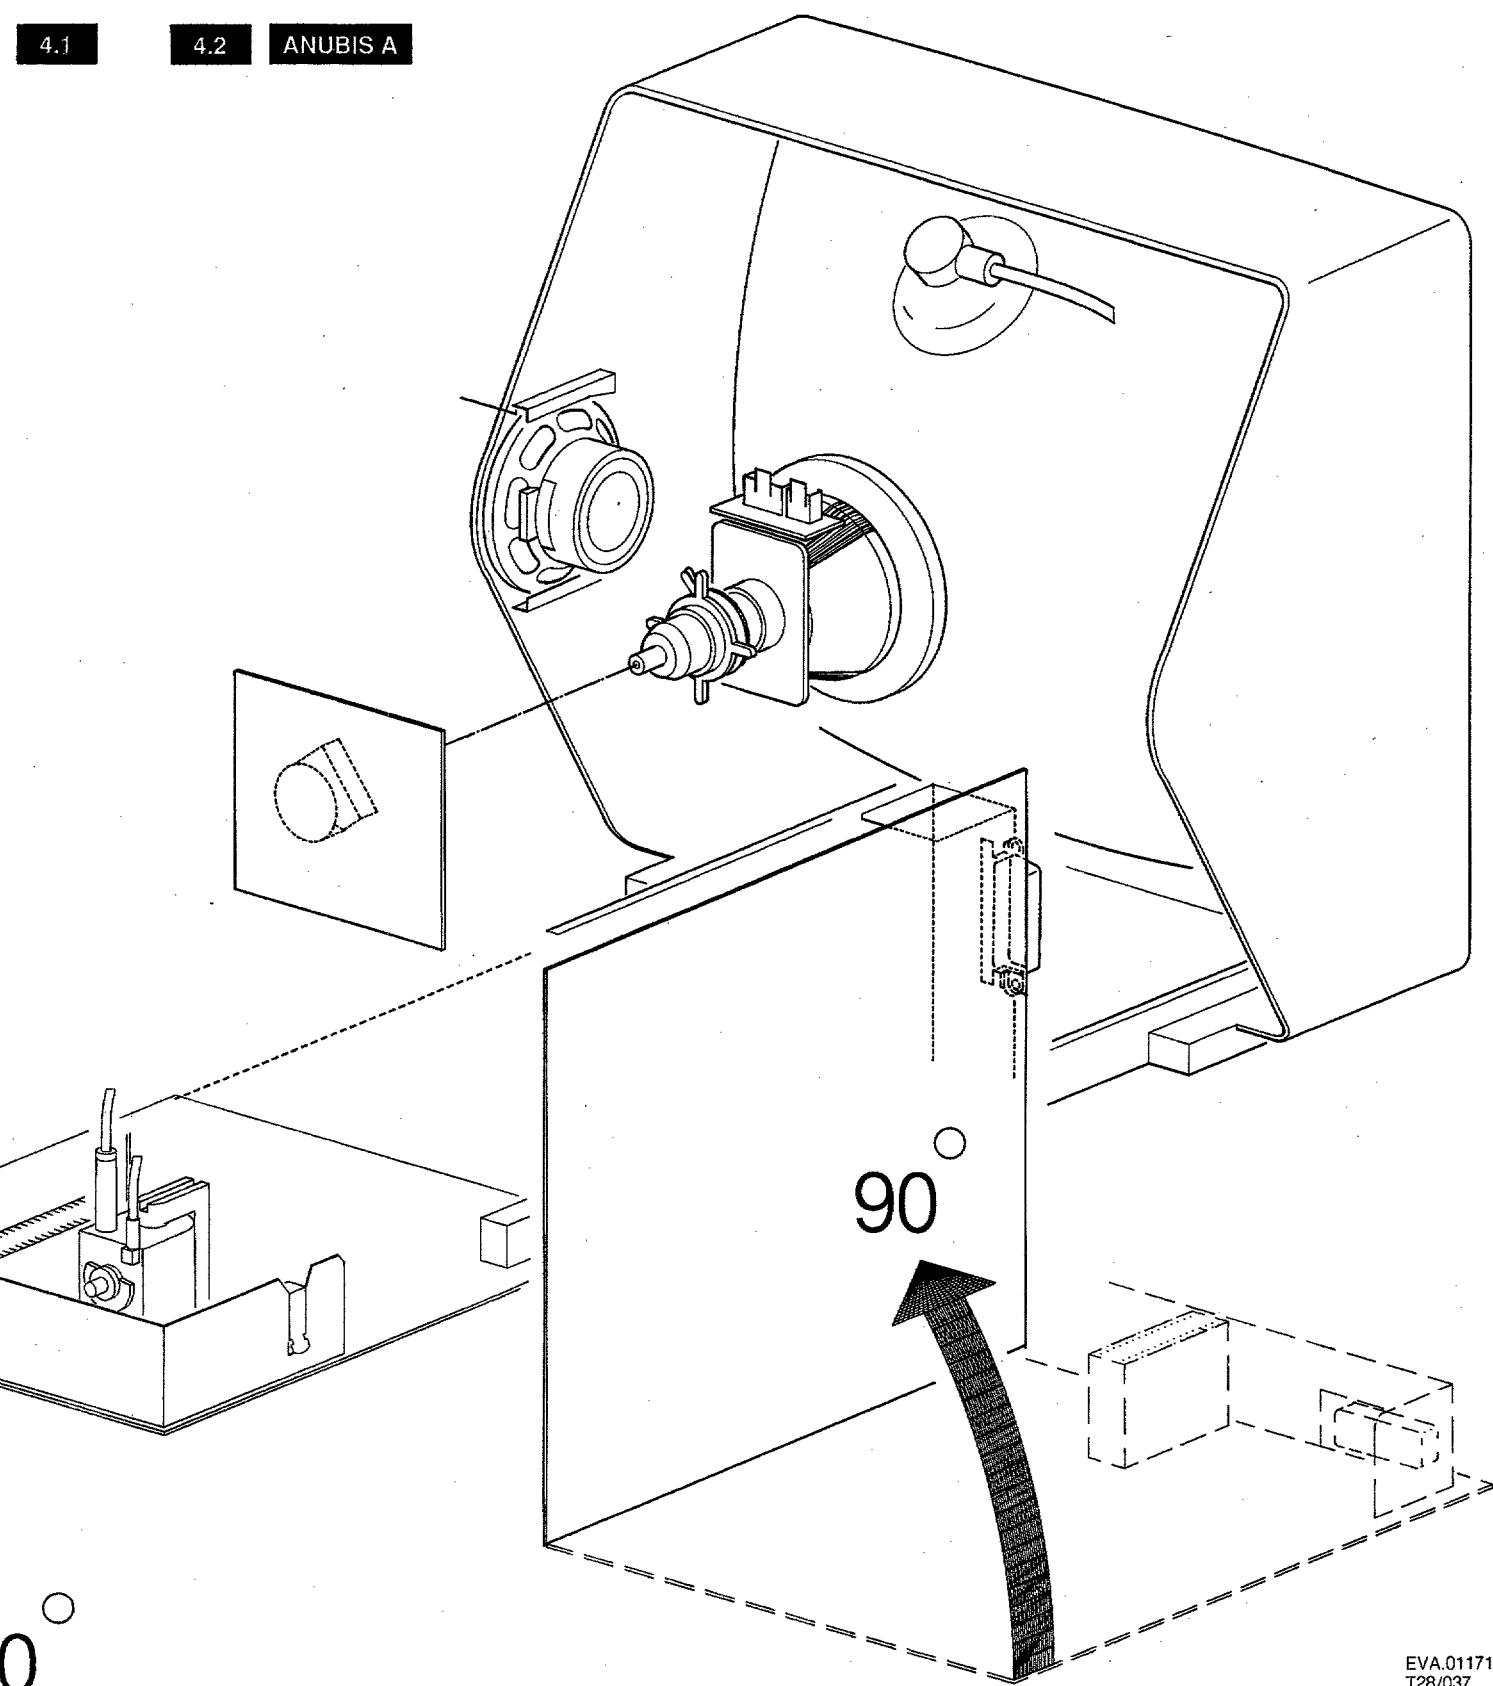


Fig. 5

EVA.01171
T28/037

Blockdiagram

Block schaltbild

ANUBIS A 5.1






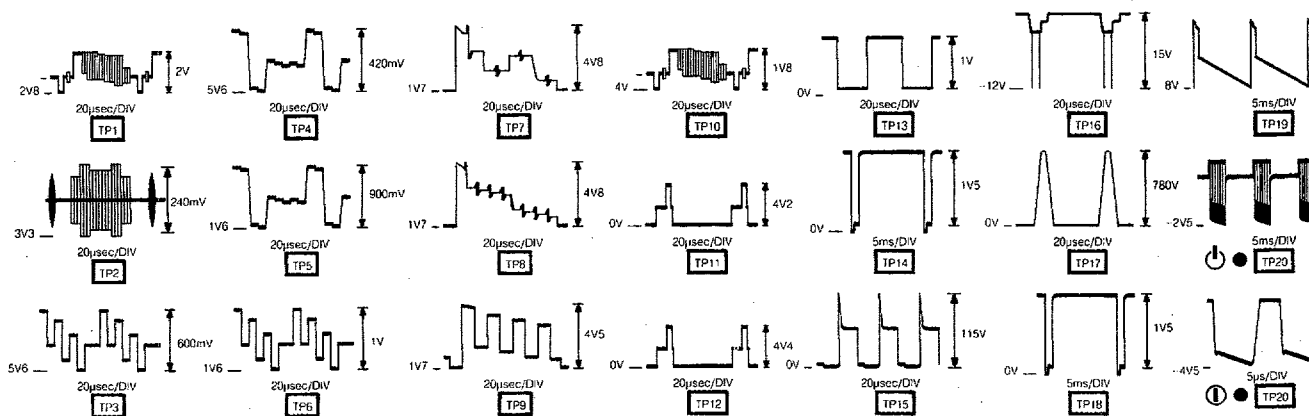



Schéma-bloc

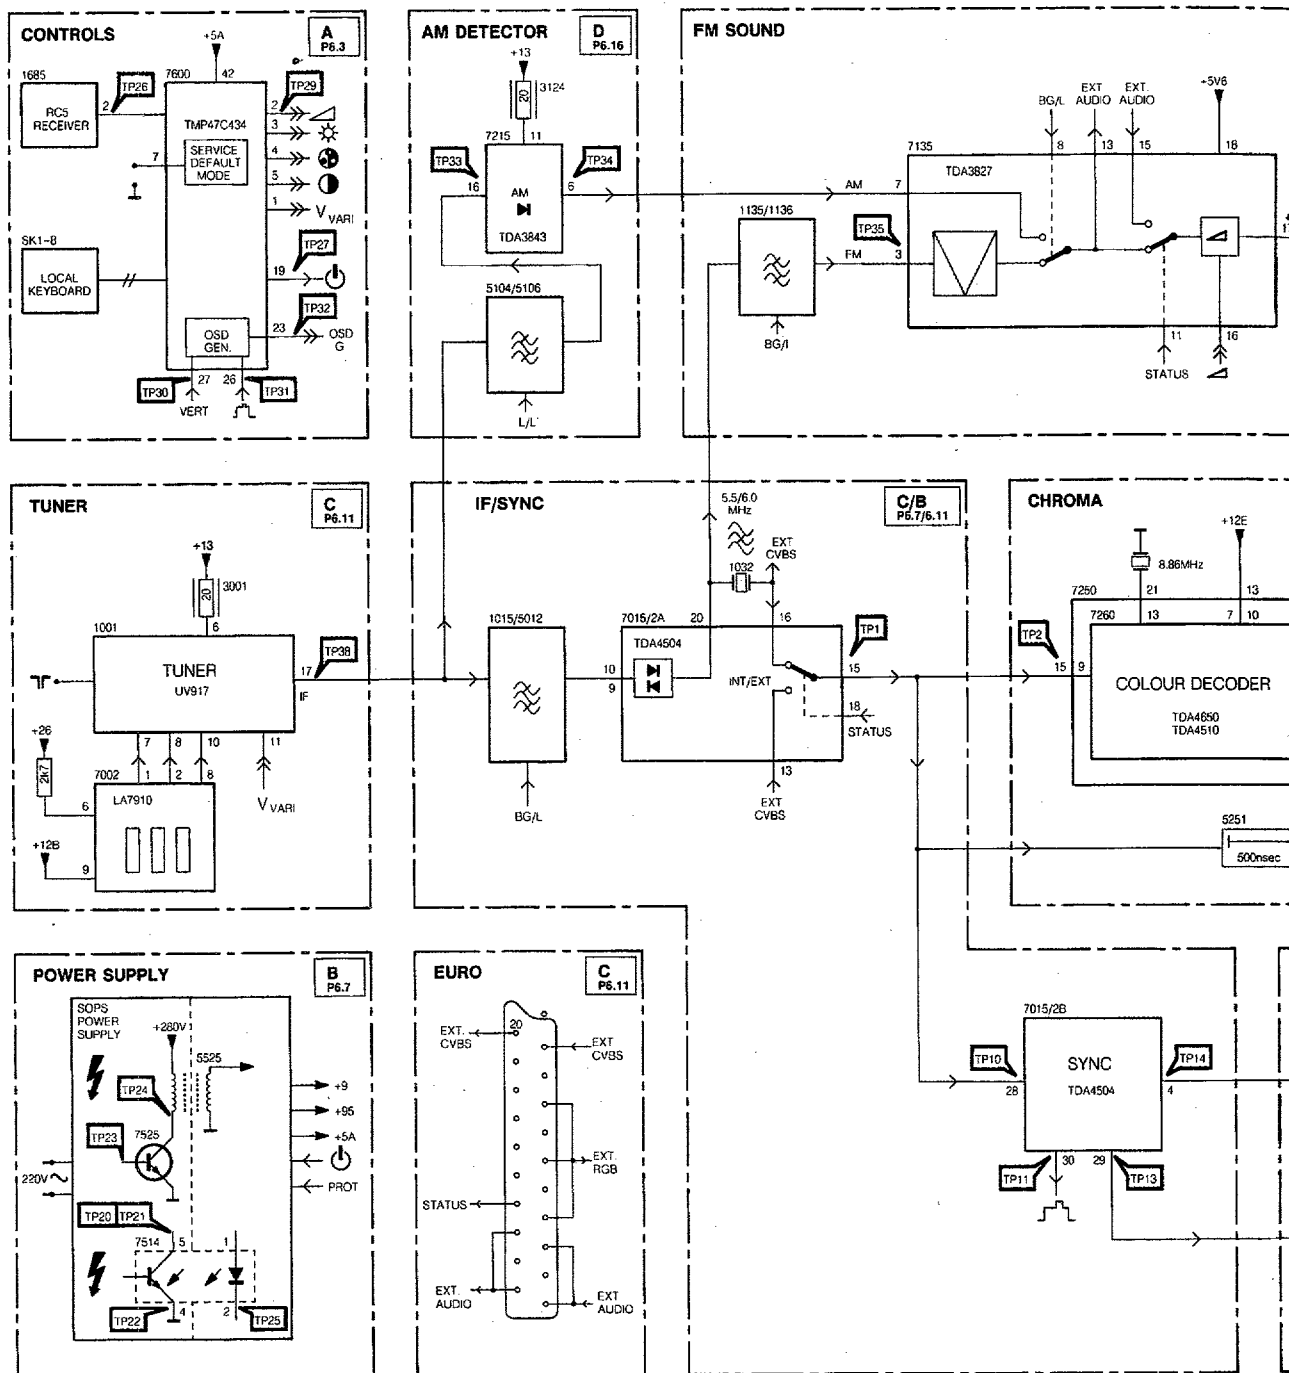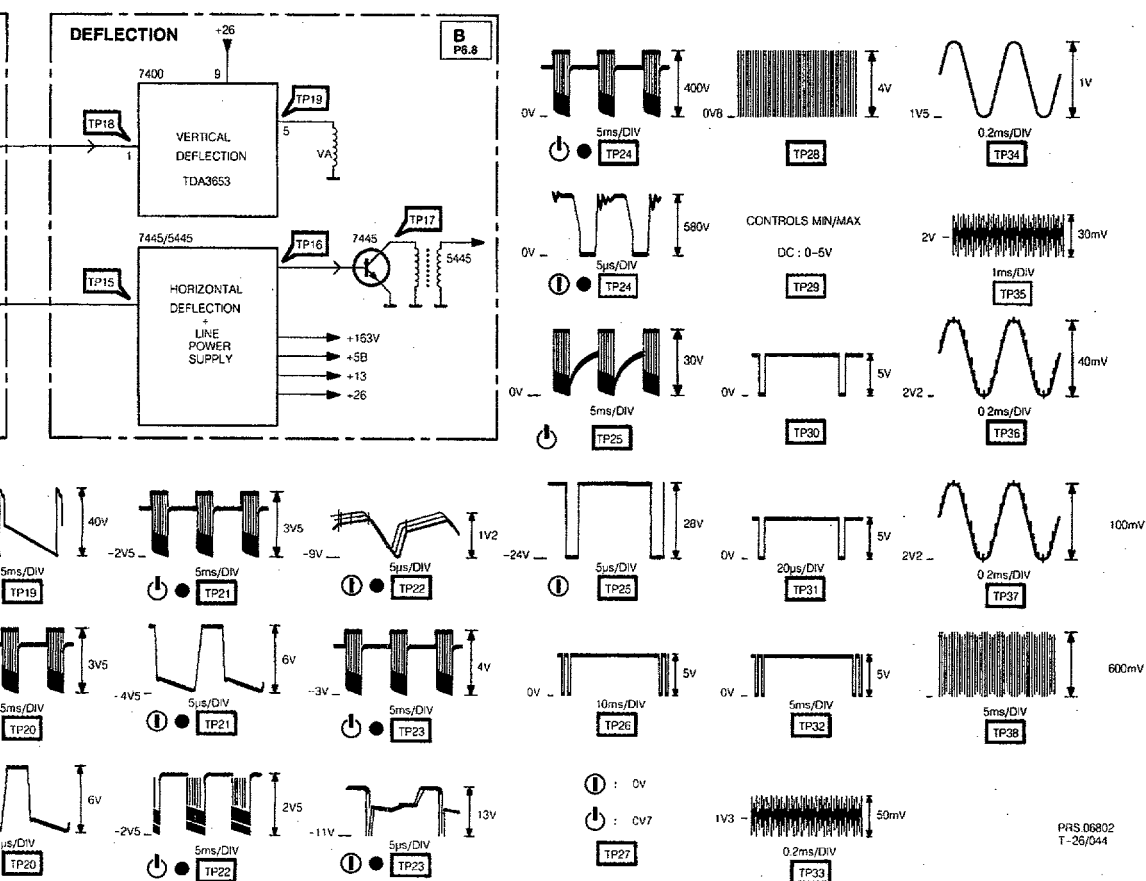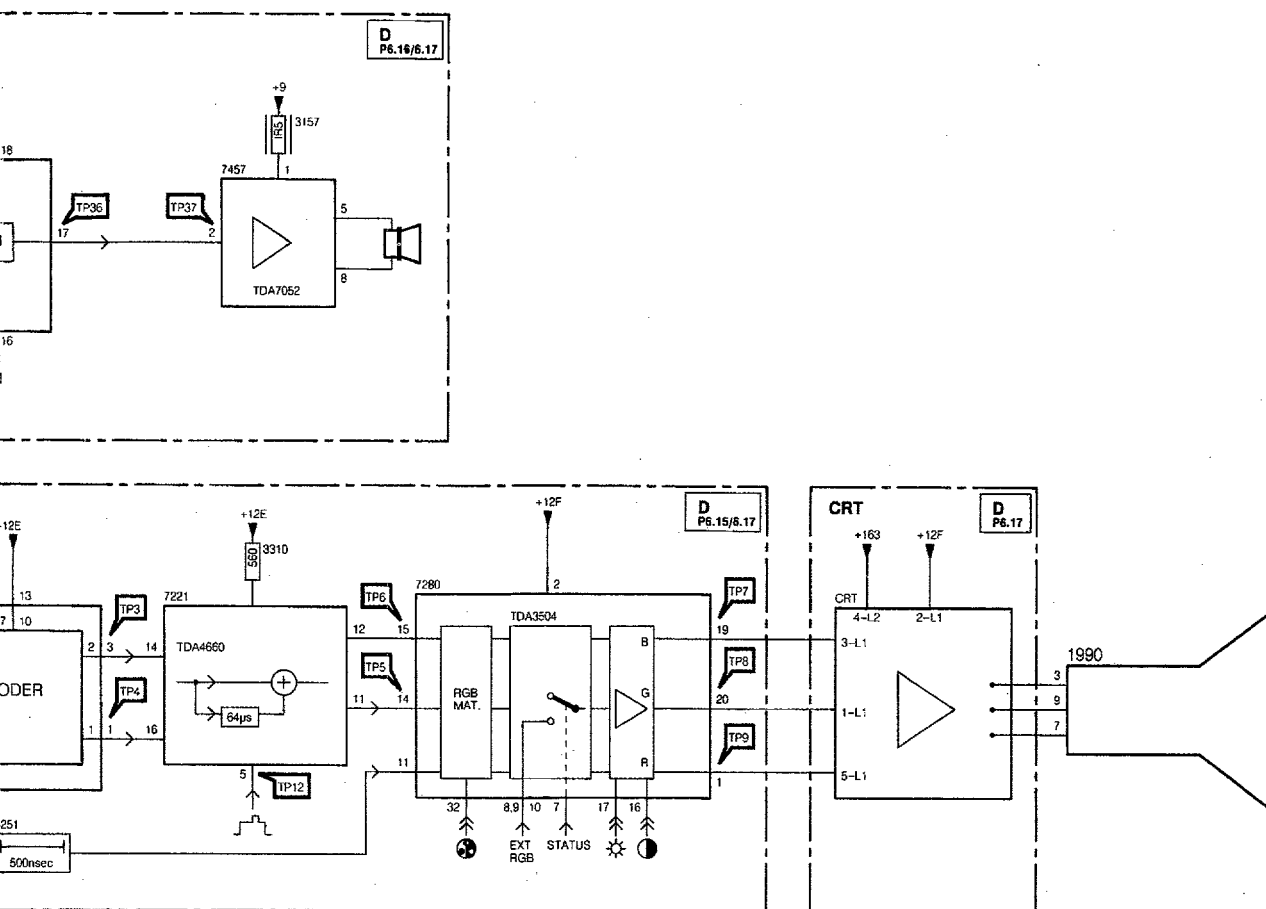

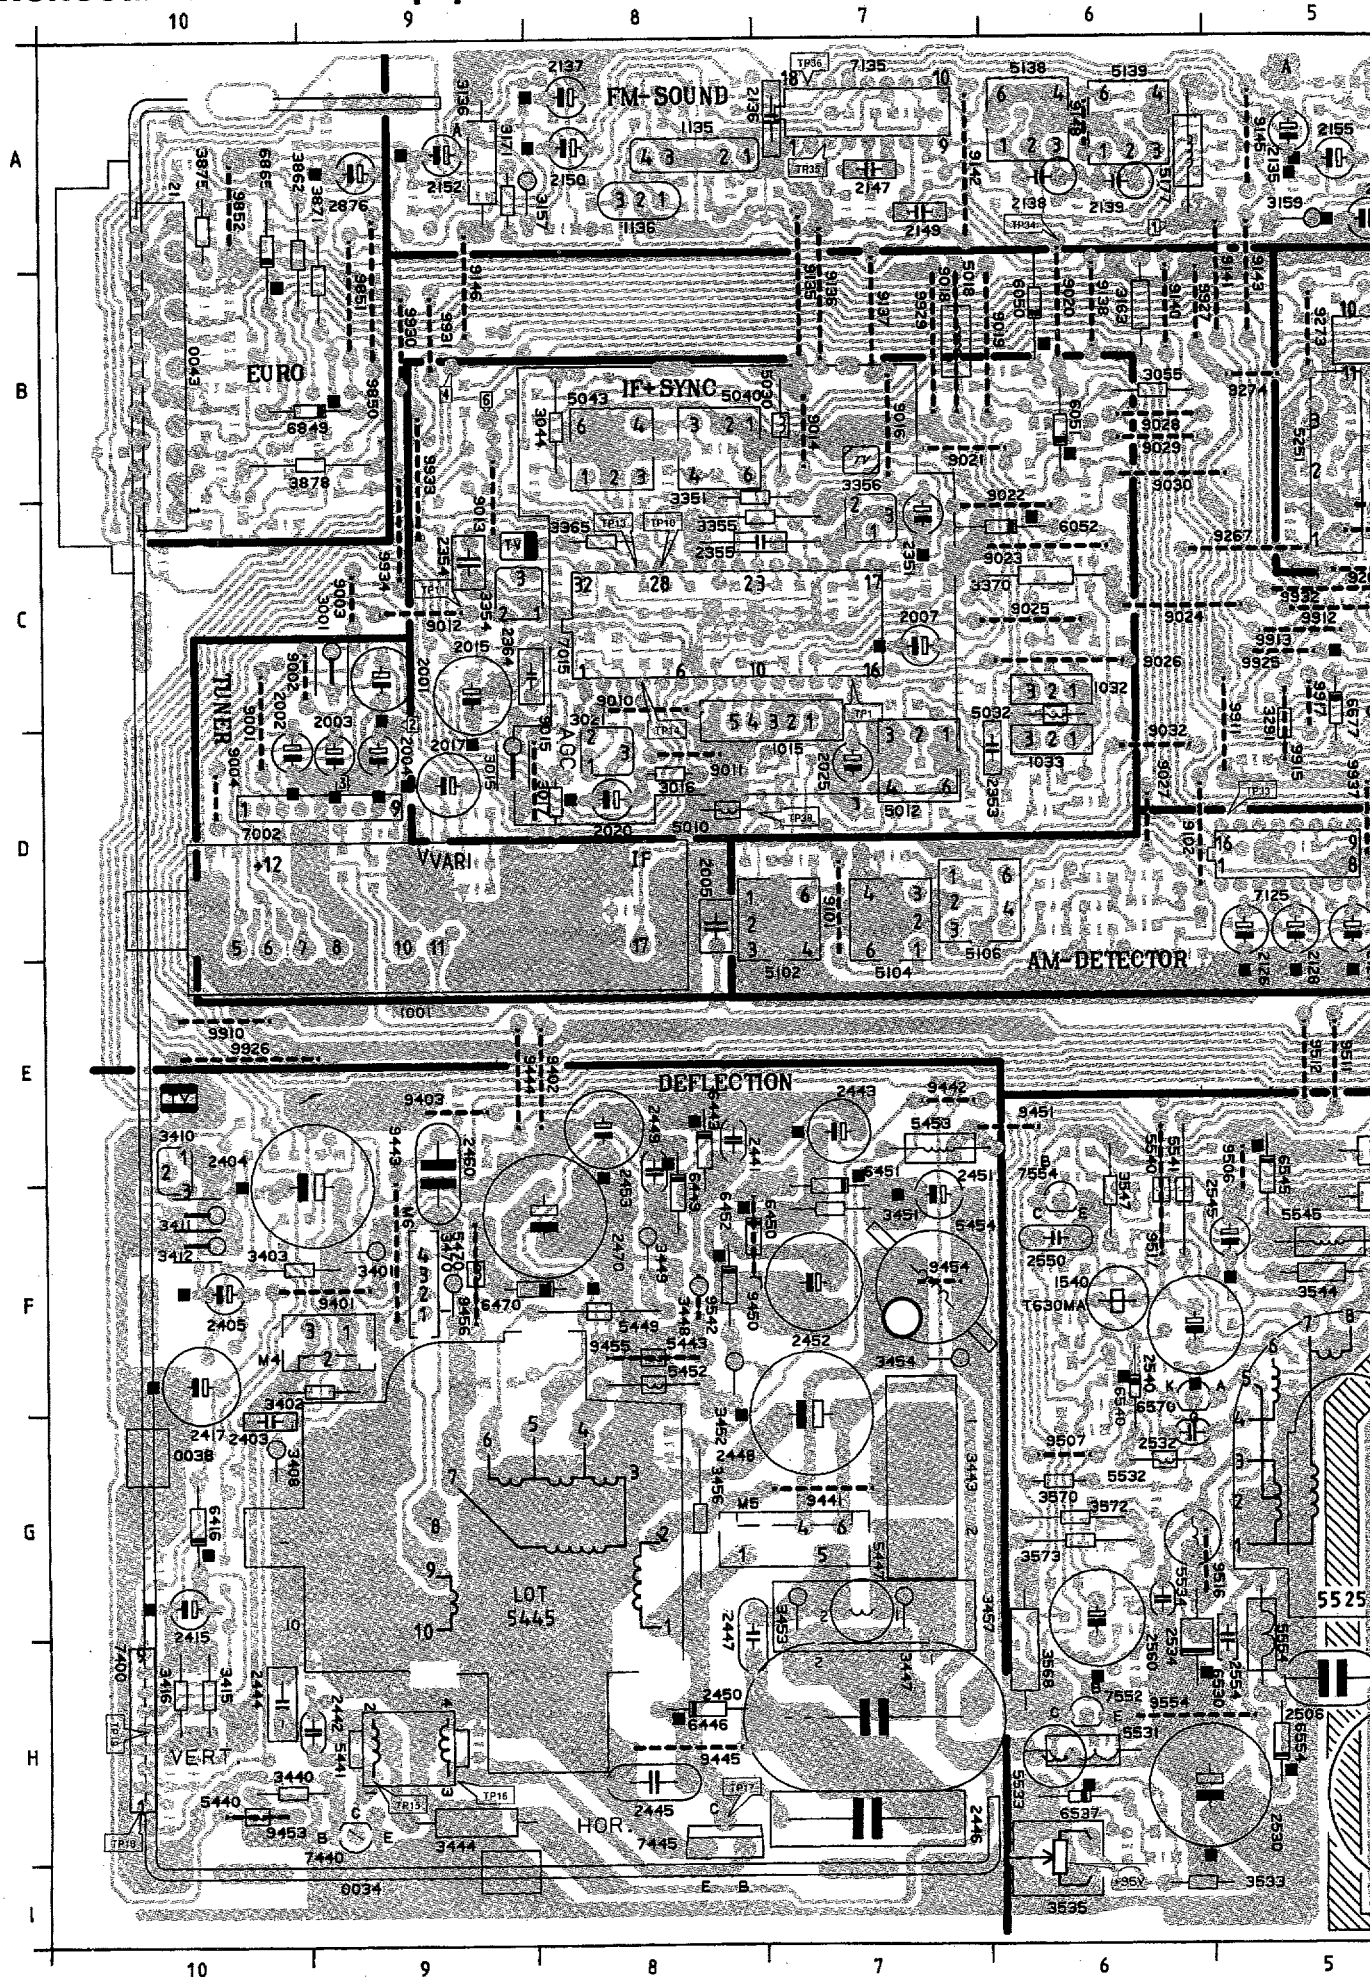

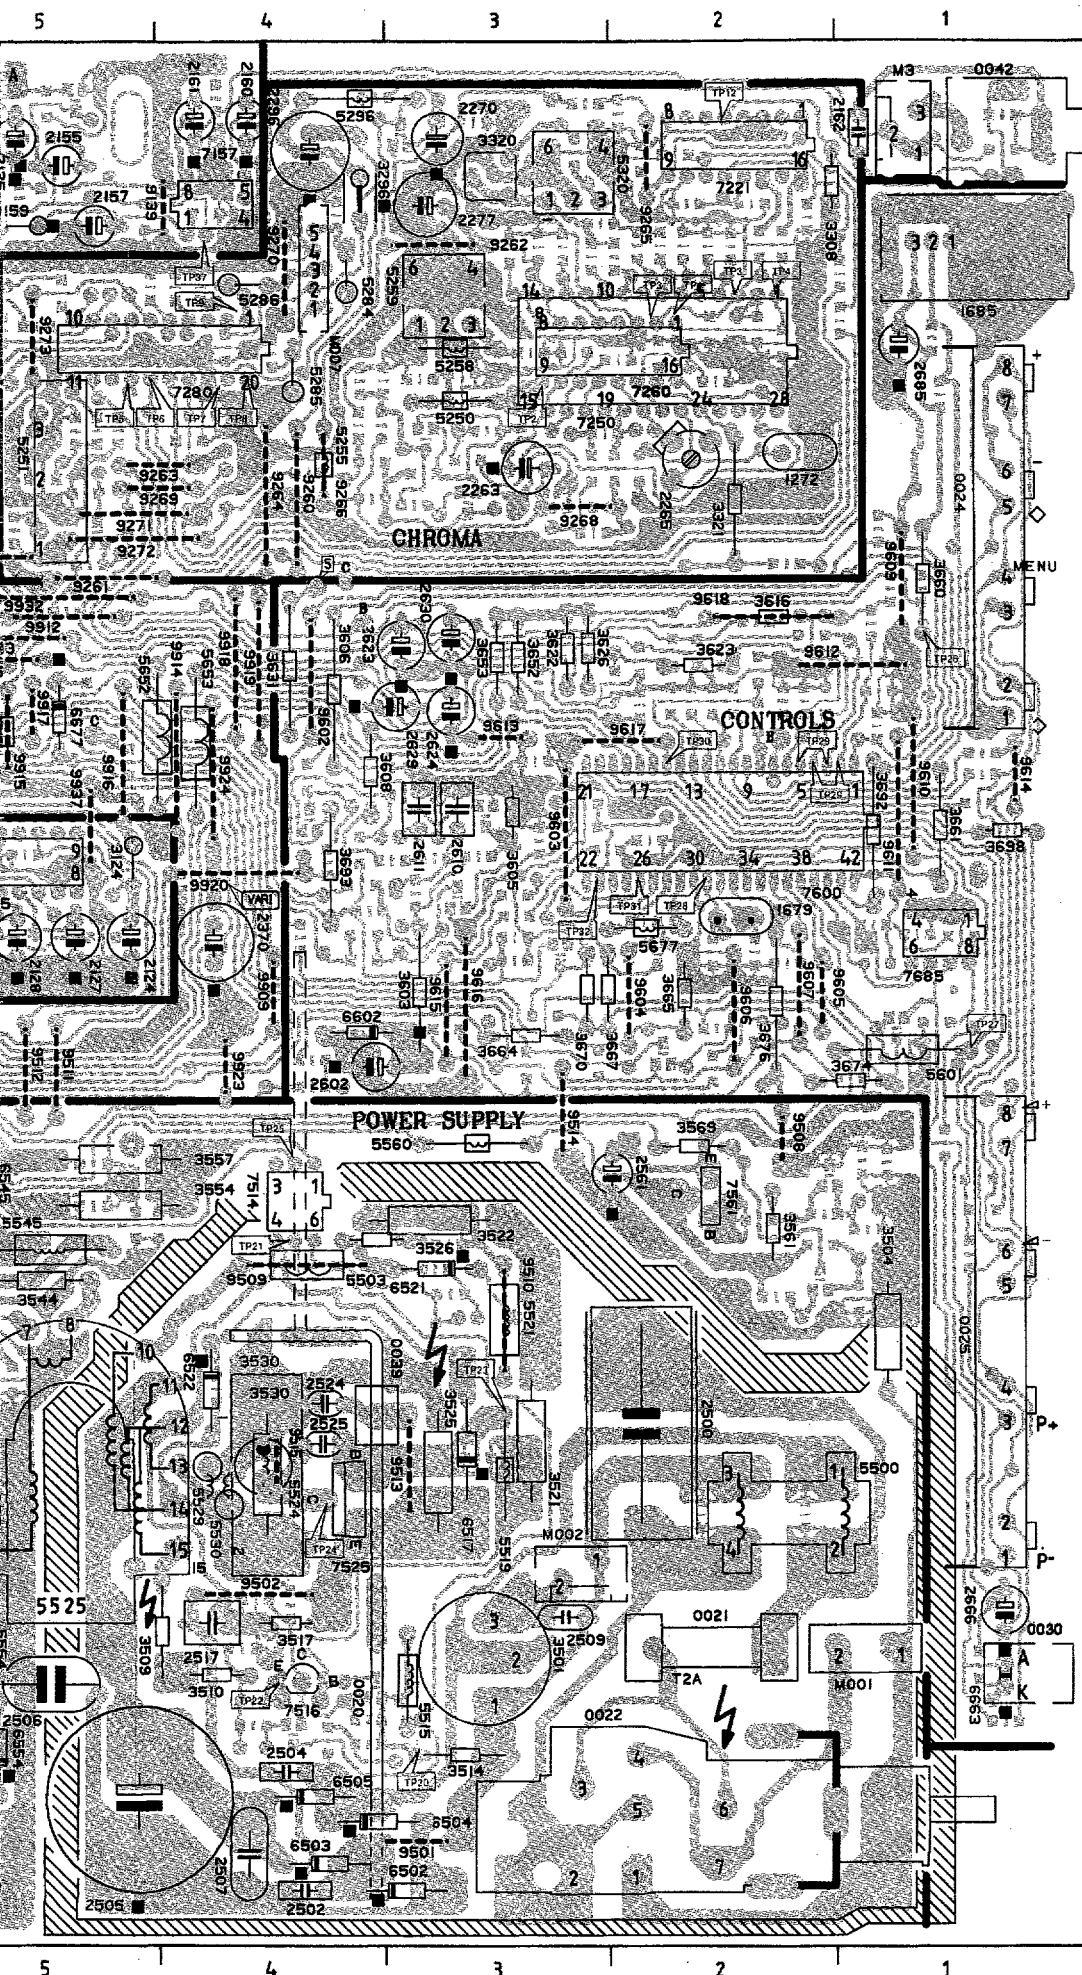


0021 H2	3358 C7	5554 H5	9502 G4
0022 I2	3365 C8	5560 E3	9506 E5
0024 C1	3370 C8	5601 E1	9507 G6
0025 G1	3401 F8	5652 D5	9508 E2
0042 A1	3402 F8	5653 D4	9509 F4
0043 C10	3403 F10	5677 D2	9510 F3
1001 D10	3408 G10	6050 B6	9511 E5
1015 C7	3410 E10	8051 B6	9512 E5
1032 C8	3411 F10	8052 C6	9513 G3
1033 D8	3412 F10	8416 G10	9514 E3
1135 A8	3415 H10	8443 E8	9515 G4
1136 A8	3418 H10	8446 H8	9516 G6
1272 B2	3440 H10	8448 F8	9517 F6
1540 F6	3443 G7	8450 F8	9554 H6
1679 D2	3444 H9	8451 F7	9802 C4
1885 A1	3447 G7	8452 F8	9803 D3
2001 C9	3448 F8	8470 F8	9804 E2
2002 D10	3449 F8	8502 I3	9805 E2
2003 D9	3451 F7	8503 I4	9806 E2
2004 D9	3452 F8	8504 H4	9807 E2
2005 D8	3453 G7	8505 H4	9808 C1
2007 C7	3454 F7	8517 G3	9810 D1
2015 C9	3458 G8	8521 F3	9811 D1
2017 D9	3457 G7	8522 F4	9812 C1
2020 D8	3470 F9	8530 H6	9813 D3
2025 D7	3501 H3	8537 H6	9814 D1
2124 D5	3504 F1	8540 F8	9815 E3
2126 D5	3509 G4	8545 E5	9816 E3
2127 D5	3510 H4	8554 H5	9817 D2
2128 D5	3514 H3	8570 F8	9818 C2
2135 A5	3517 G4	8602 E4	9850 B9
2137 A8	3521 G3	8663 H1	9851 B9
2138 A6	3522 G3	8677 C5	9852 A10
2139 A6	3525 G3	8849 B9	9909 E4
2147 A7	3526 F4	8865 A10	9910 E10
2149 A7	3530 G4	7002 D10	9911 D5
2150 A8	3530 G4	7015 C8	9912 C5
2152 A9	3533 I6	7125 D5	9913 C5
2155 A5	3535 I6	7135 A7	9914 D4
2157 A5	3544 F5	7157 A4	9915 D5
2160 A4	3547 F5	7221 A2	9916 D5
2161 A4	3554 F5	7250 B2	9917 C5
2162 A1	3557 E5	7280 B4	9918 C4
2263 B3	3561 F2	7400 H10	9919 C4
2265 B2	3568 H6	7440 H9	9920 D4
2270 A3	3569 E2	7445 H8	9923 E4
2277 A3	3570 G6	7514 E4	9924 D4
2286 A4	3572 G6	7516 H4	9925 C5
2351 C7	3573 G6	7525 G4	9926 E10
2353 D6	3603 E3	7552 H6	9927 B6
2354 C9	3605 D3	7554 F6	9929 B7
2355 C7	3606 C4	7581 E2	9930 B9
2364 C8	3608 D4	7600 D1	9931 B9
2370 D4	3616 C2	7685 D1	9932 C5
2403 G10	3622 C3	9001 C10	9933 B9
2404 F9	3623 C2	9002 C9	9934 C9
2405 F10	3626 C3	9003 C9	9937 D5
2415 G10	3631 C4	9004 D10	M001 H1
2417 F10	3652 C3	9010 C8	M002 G3
2441 E8	3653 C3	9011 D8	M007 A4
2442 H8	3660 C1	9012 C9	M3 A1
2443 E7	3661 D1	9013 B9	M4 F9
2444 H10	3664 E3	9014 B7	M5 G8
2445 H8	3665 E2	9015 D8	M6 F9
2446 H7	3667 E3	9016 B7	TP1 C7
2447 H8	3670 E3	9018 B7	TP2 B3
2448 G7	3674 F1	9019 B6	TP3 B2
2449 E8	3676 E2	9020 B6	TP4 B2
2450 H7	3692 D1	9021 B7	TP5 B5
2451 F7	3693 D4	9022 C8	TP6 B5
2452 F7	3698 D1	9023 C8	TP6 B5
2453 E8	3882 A10	9024 C8	TP7 B4
2460 E9	3871 B9	9025 C8	TP8 B4
2470 F8	3875 A10	9026 C8	TP9 B4
2500 G2	3878 B9	9027 D6	TP10 C8
2502 I4	5010 D8	9028 B6	TP11 C9
2504 H4	5012 D7	9029 B6	TP12 A2
2505 H5	5018 B7	9030 B6	TP13 C8
2506 H5	5030 B7	9032 D6	TP14 C8
2509 G3	5032 C8	9101 D7	TP15 H9
2517 G4	5040 B8	9102 D6	TP16 H9
2524 F4	5102 D8	9135 B7	TP17 H8
2525 G4	5104 D7	9136 B7	TP18 H10
2530 H6	5106 D7	9137 B7	TP19 H10
2532 G6	5138 A6	9138 B6	TP20 H3
2534 G6	5139 A6	9139 A4	TP21 F4
2540 F6	5177 A6	9140 B6	TP22 H4
2545 F5	5250 B3	9141 B5	TP23 F3
2550 F6	5251 C5	9142 A7	TP24 G4
2554 H5	5255 B3	9143 B5	TP25 E4
2560 G6	5258 B3	9145 A5	TP26 C1
2561 E2	5259 B3	9146 B9	TP27 E1
2562 E4	5284 B4	9148 A6	TP28 D2
2610 D3	5285 B4	9260 B4	TP29 D2
2611 D3	5286 B4	9261 C5	TP30 D2
2623 C3	5296 A4	9262 A3	TP31 D2
2624 C3	5320 A3	9263 B4	TP32 D3
2629 C3	5440 H10	9264 B4	TP33 A6
2630 C3	5441 H9	9265 A2	TP35 A7
2666 G1	5443 F8	9266 B4	TP36 A7
2685 B1	5445 G9	9267 C5	TP37 B4
2687 A9	5447 G7	9268 C3	
3001 C9	5448 F8	9269 B4	
3015 D8	5452 F8	9270 A4	
3016 D8	5453 E7	9271 C5	
3017 D8	5454 F7	9272 C5	
3021 D8	5470 F9	9273 B5	
3044 B8	5500 G1	9274 B5	
3055 B8	5503 F4	9401 F9	
3124 D5	5515 H3	9402 E8	
3136 A9	5519 G3	9403 E9	
3157 A8	5521 F3	9441 G7	
3159 A5	5524 G4	9442 E7	
3163 B8	5525 G5	9443 F9	
3171 A9	5529 G4	9444 E9	
3291 D5	5530 G4	9445 H8	
3296 A4	5531 H6	9450 F8	
3308 A2	5532 G6	9451 E6	
3320 A3	5533 H6	9452 F8	
3321 C2	5534 G6	9453 H10	
3351 C6	5540 F8	9454 F7	
3354 C8	5541 F8	9455 F8	
3355 C7	5545 F5	9456 F8	
		9501 H3	

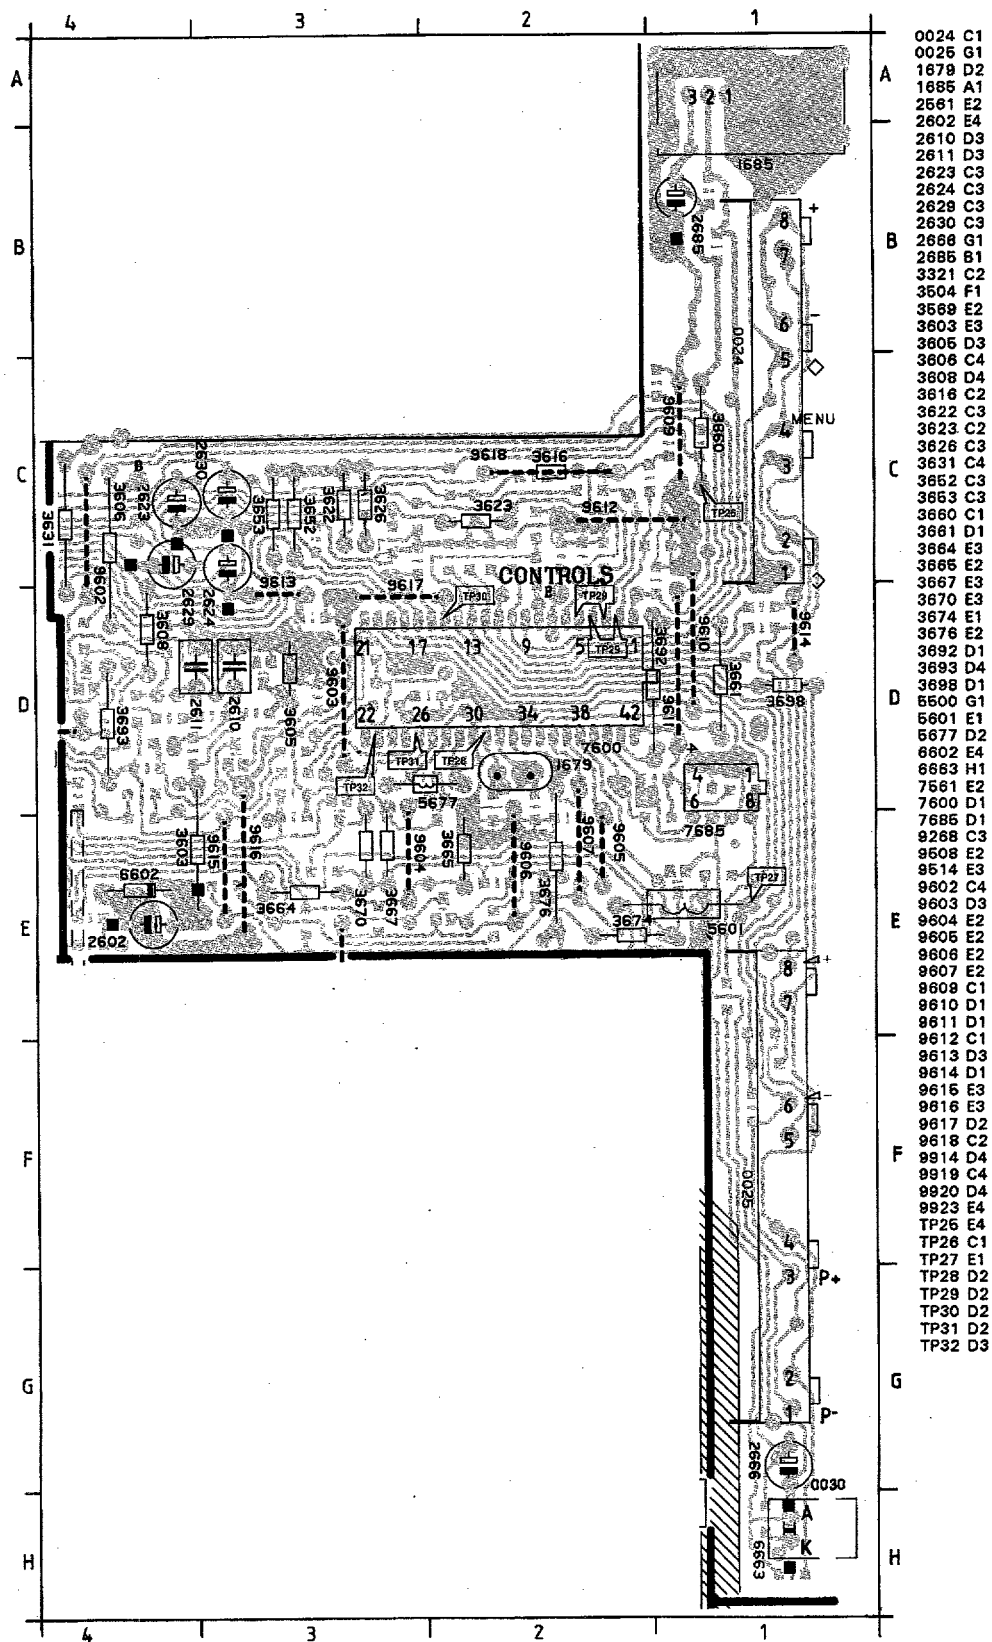



Commandes

0024 C1
0025 G1
1679 D2
1685 A1
2267 C3
2279 B1
2280 B1
2310 C3
2561 E2
2602 E4
2606 C1
2610 D3
2611 D3
2616 C1
2620 C1
2623 C3
2624 C3
2625 C2
2626 C2
2629 C3
2630 C3
2651 C2
2658 D3
2660 B1
2665 E3
2666 G1
2667 D3
2669 D3
2670 E3
2676 D2
2677 D2
2678 D2
2679 E4
2680 D2
2681 D2
2682 E2
2686 B1
2688 D1
2690 D1
2695 C2
2696 C2
2697 C2
2698 C2
3160 A1
3161 A1
3307 C2
3318 C3
3321 C2
3565 E1
3566 F1
3601 E4
3602 E4
3603 E3
3604 D3
3605 D3
3606 C4
3607 C1
3608 D4
3609 C2
3610 D3
3611 D3
3612 D3
3613 C3
3614 C1
3615 C4
3616 C2
3617 C1
3618 C3
3620 C2
3621 C2
3622 C3
3623 C2
3624 C2
3625 C2
3626 C3
3627 C2
3628 C2
3630 C1
3631 C4
3651 E2
3652 C3
3653 C3
3654 E3
3655 D3
3656 D3
3657 C2
3658 D3
3659 D4
3660 C1
3661 D1
3662 B1
3663 E1
3664 E3
3665 E2
3666 H1
3667 E3
3668 D4
3669 E3
3670 E3
3671 E1
3672 E3
3673 E1
3674 E1
3675 E2


3678 E2
3679 D3
3680 D3
3682 E1
3683 D1
3684 D1
3685 E1
3686 D3
3687 D4
3688 D4
3689 D4
3692 D1
3693 D4
3695 D1
3696 D1
3697 D1
3698 D1
3699 H1
5500 G1
5560 E3
5601 E1
5653 D4
5677 D2
5682 F1
5685 E1
5686 E1
5687 E4
5688 F1
5689 F1
5690 F1
5691 E1
5692 E1
5693 E1
5694 E1
5695 E1
5696 E1
5697 E1
5698 E1
5699 E1
5700 D1
5701 D1
5702 D1
5703 D1
5704 D1
5705 D1
5706 D1
5707 D1
5708 D1
5709 D1
5710 D1
5711 D1
5712 D1
5713 D1
5714 D1
5715 D1
5716 D1
5717 D1
5718 D1
5719 D1
5720 D1
5721 D1
5722 D1
5723 D1
5724 D1
5725 D1
5726 D1
5727 D1
5728 D1
5729 D1
5730 D1
5731 D1
5732 D1
5733 D1
5734 D1
5735 D1
5736 D1
5737 D1
5738 D1
5739 D1
5740 D1
5741 D1
5742 D1
5743 D1
5744 D1
5745 D1
5746 D1
5747 D1
5748 D1
5749 D1
5750 D1
5751 D1
5752 D1
5753 D1
5754 D1
5755 D1
5756 D1
5757 D1
5758 D1
5759 D1
5760 D1
5761 D1
5762 D1
5763 D1
5764 D1
5765 D1
5766 D1
5767 D1
5768 D1
5769 D1
5770 D1
5771 D1
5772 D1
5773 D1
5774 D1
5775 D1
5776 D1
5777 D1
5778 D1
5779 D1
5780 D1
5781 D1
5782 D1
5783 D1
5784 D1
5785 D1
5786 D1
5787 D1
5788 D1
5789 D1
5790 D1
5791 D1
5792 D1
5793 D1
5794 D1
5795 D1
5796 D1
5797 D1
5798 D1
5799 D1
5800 D1
5801 D1
5802 D1
5803 D1
5804 D1
5805 D1
5806 D1
5807 D1
5808 D1
5809 D1
5810 D1
5811 D1
5812 D1
5813 D1
5814 D1
5815 D1
5816 D1
5817 D1
5818 D1
5819 D1
5820 D1
5821 D1
5822 D1
5823 D1
5824 D1
5825 D1
5826 D1
5827 D1
5828 D1
5829 D1
5830 D1
5831 D1
5832 D1
5833 D1
5834 D1
5835 D1
5836 D1
5837 D1
5838 D1
5839 D1
5840 D1
5841 D1
5842 D1
5843 D1
5844 D1
5845 D1
5846 D1
5847 D1
5848 D1
5849 D1
5850 D1
5851 D1
5852 D1
5853 D1
5854 D1
5855 D1
5856 D1
5857 D1
5858 D1
5859 D1
5860 D1
5861 D1
5862 D1
5863 D1
5864 D1
5865 D1
5866 D1
5867 D1
5868 D1
5869 D1
5870 D1
5871 D1
5872 D1
5873 D1
5874 D1
5875 D1
5876 D1
5877 D1
5878 D1
5879 D1
5880 D1
5881 D1
5882 D1
5883 D1
5884 D1
5885 D1
5886 D1
5887 D1
5888 D1
5889 D1
5890 D1
5891 D1
5892 D1
5893 D1
5894 D1
5895 D1
5896 D1
5897 D1
5898 D1
5899 D1
5900 D1
5901 D1
5902 D1
5903 D1
5904 D1
5905 D1
5906 D1
5907 D1
5908 D1
5909 D1
5910 D1
5911 D1
5912 D1
5913 D1
5914 D1
5915 D1
5916 D1
5917 D1
5918 D1
5919 D1
5920 D1
5921 D1
5922 D1
5923 D1
5924 D1
5925 D1
5926 D1
5927 D1
5928 D1
5929 D1
5930 D1
5931 D1
5932 D1
5933 D1
5934 D1
5935 D1
5936 D1
5937 D1
5938 D1
5939 D1
5940 D1
5941 D1
5942 D1
5943 D1
5944 D1
5945 D1
5946 D1
5947 D1
5948 D1
5949 D1
5950 D1
5951 D1
5952 D1
5953 D1
5954 D1
5955 D1
5956 D1
5957 D1
5958 D1
5959 D1
5960 D1
5961 D1
5962 D1
5963 D1
5964 D1
5965 D1
5966 D1
5967 D1
5968 D1
5969 D1
5970 D1
5971 D1
5972 D1
5973 D1
5974 D1
5975 D1
5976 D1
5977 D1
5978 D1
5979 D1
5980 D1
5981 D1
5982 D1
5983 D1
5984 D1
5985 D1
5986 D1
5987 D1
5988 D1
5989 D1
5990 D1
5991 D1
5992 D1
5993 D1
5994 D1
5995 D1
5996 D1
5997 D1
5998 D1
5999 D1
6000 D1

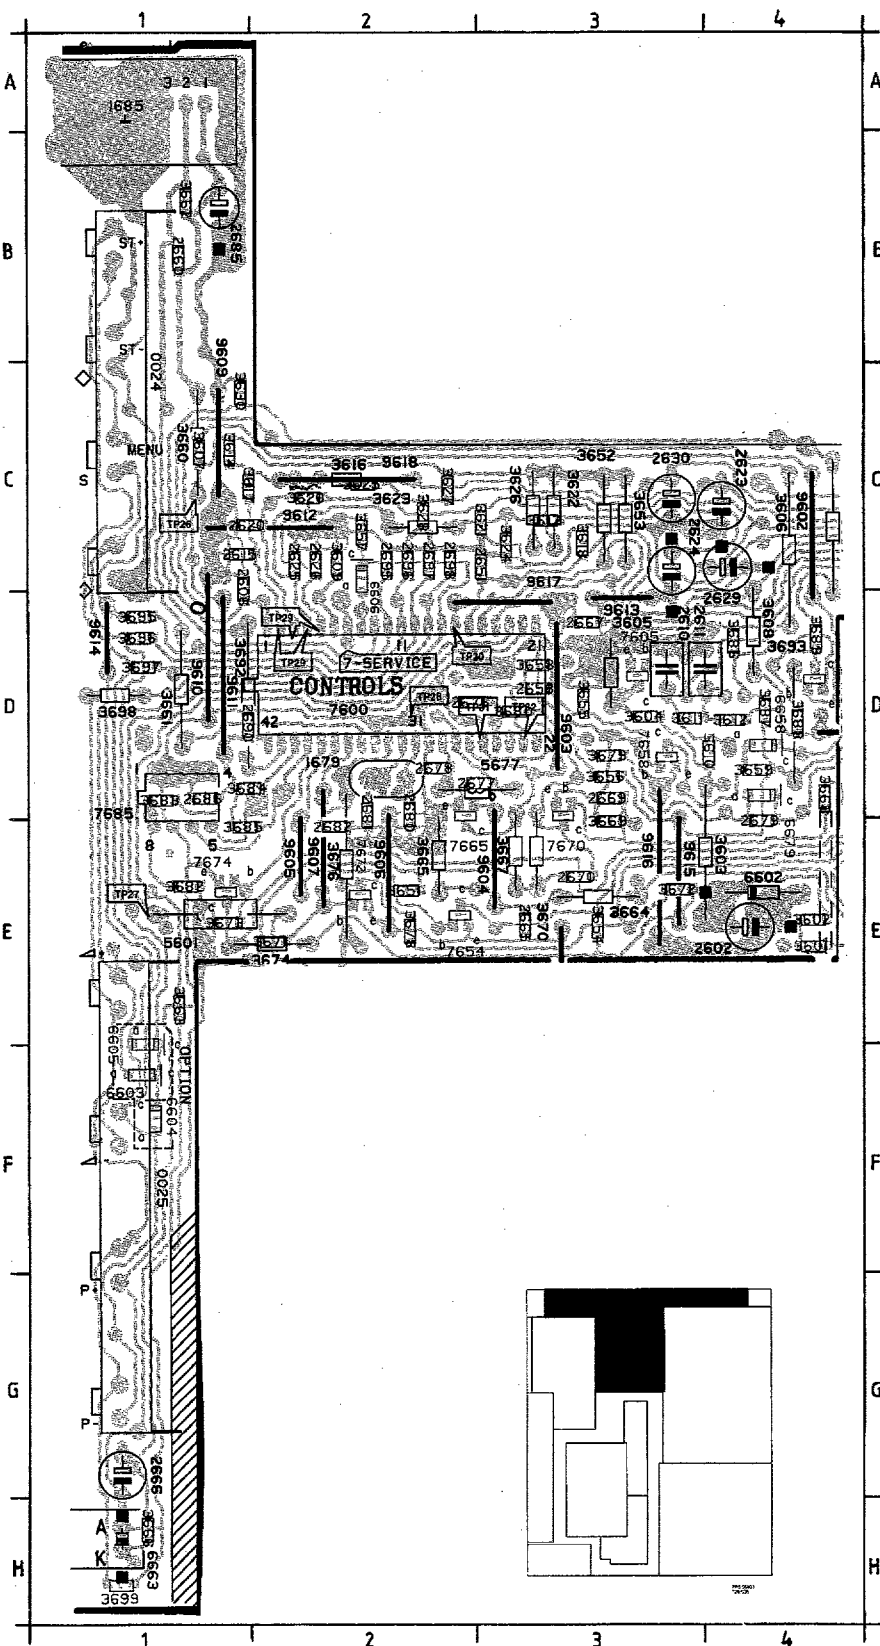

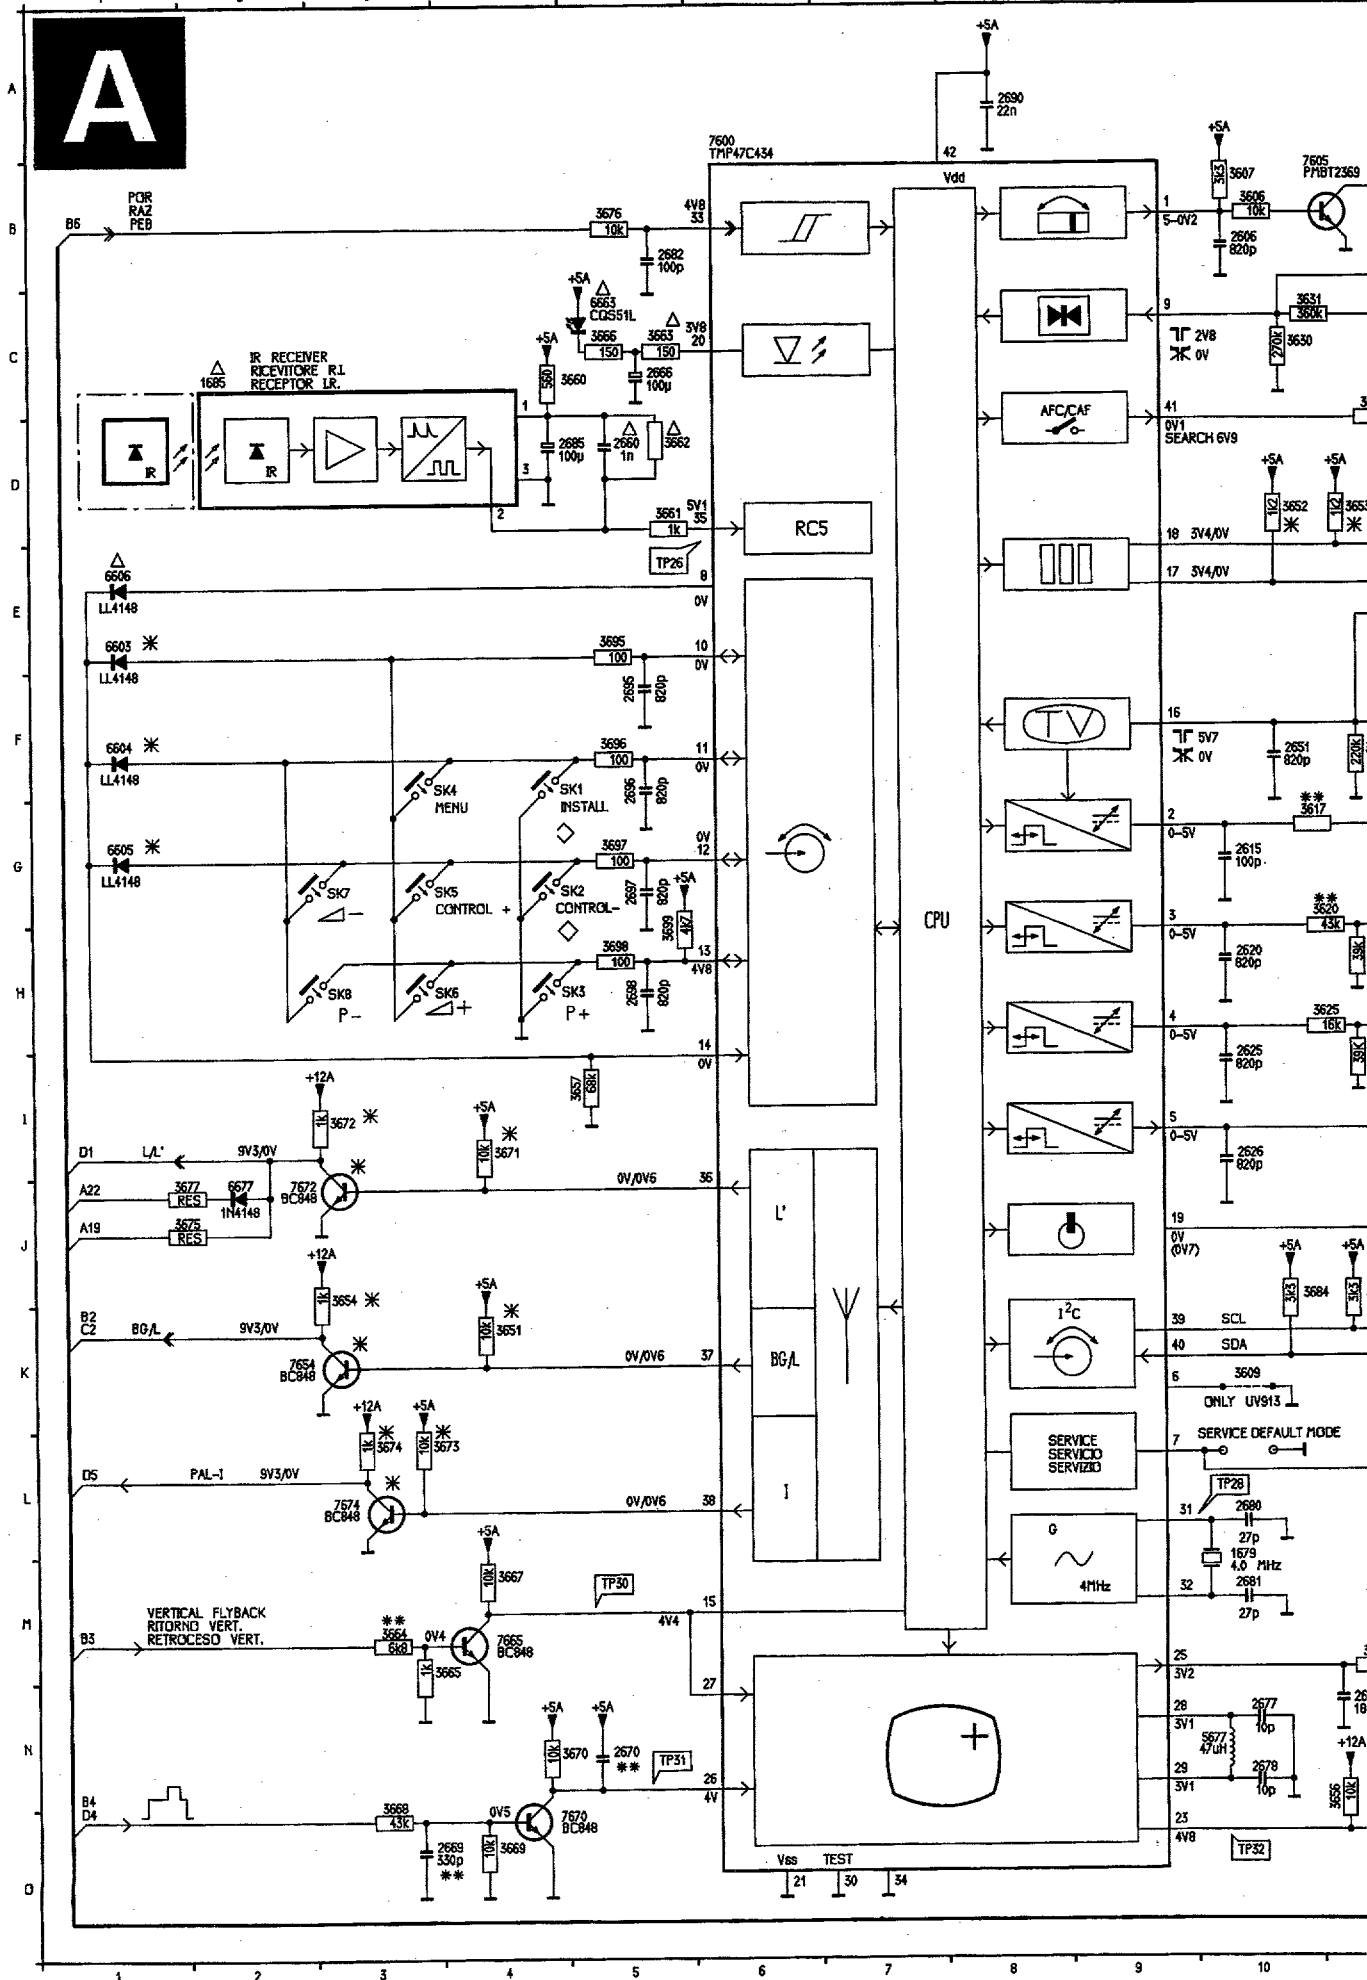

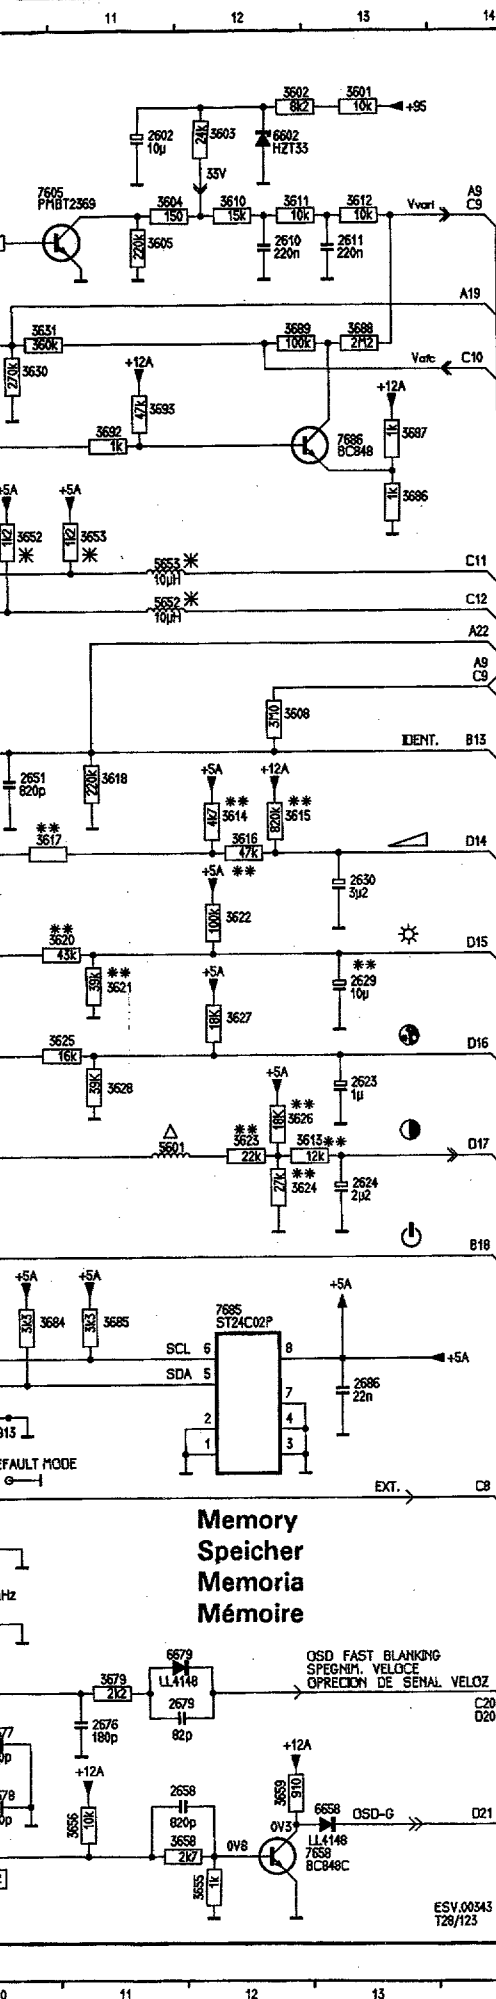

A

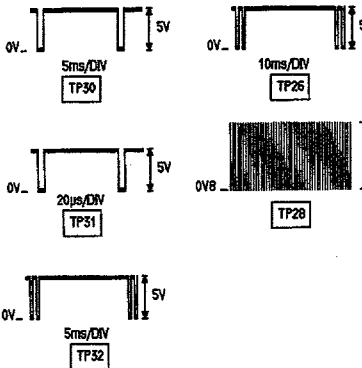

*

POS NR	SYSTEM 1	SYSTEM 2	SYSTEM 4	SYSTEM 5
3551	---	---	10k	10k
3552	1k2	---	1k2	1k2
3553	1k2	---	1k2	1k2
3554	---	---	1k	1k
3571	---	---	10k	1k
3572	---	---	1k	1k
3573	---	---	---	10k
3574	---	---	---	1k
3578	---	---	JMP	JMP
3582	10µH	---	10µH	10µH
3583	10µH	---	10µH	10µH
6603	---	LL4148	---	---
6604	---	LL4148	LL4148	LL4148
6605	---	---	BC848	BC848
7554	---	---	BC848	BC848
7572	---	---	---	---
7574	---	---	---	---

SYSTEM 1: PAL BG
SYSTEM 2: PAL BG : SECAM BG
SYSTEM 4: PAL BG : SECAM BG LL
SYSTEM 5: PAL BG : SECAM BG LL

△

POS NR	REMOTE CONTROL	NON REM. CONTROL
1695	LTM18848	---
2660	1n	---
3652	---	4k7
3653	150E	---
3656	150E	---
5601	10µH	---
6605	---	LL4148
6653	COS51L	---


**

POS NR	21"
2629	2µ2
2669	47p
2670	220p
3613	JMP
3614	47k
3615	RES
3616	JMP
3617	5k6
3620	100k
3621	5k6
3623	5k6
3624	100k
2626	100k
3664	9k1














F4
SK1
SK2
SK3
SK4
SK5
SK6
SK7
SK8
1679
1685
1686
2602
2606
2610
2611
2615
2620
2623
2624
2625
2626
2629
2630
2651
2658
2660
2666
2669
2670
2676
2677
2678
2679
2680
2681
2682
2685
2686
2689
2695
2697
2698
3601
3602
3603
3604
3605
3606
3607
3608
3609
3610
3611
3612
3613
3614
3615
3616
3617
3618
3620
3621
3622
3623
3624
3625
3626
3627
3628
3630
3631
3634
3652
3653
3654
3655
3656
3657
3658
3659
3660
3661
3662
3663
3664
3665
3666
3667
3668
3669
3670
3671
3672
3673
3674
3675
3676
3677
3678
3684
3685
3686
3687
3688
3689
3692
3693
3695
3696
3697
3698
3699
4702
5601
5652
5653
5677
6602
6603
6604
6605
6606
6658
6659
6677
6679
7600
7605
7654
7658
7659
7670
7672
7674
7685
7686
D13


0021	H2	2290	B4	2686	D1	3354	C8	3623	C2	5545	F5	7670	D3	9925	C5
0022	I2	2291	B5	2690	D1	3355	C7	3624	C2	5554	H5	7672	E2	9926	F10
0024	C1	2292	B5	2695	C2	3356	C7	3625	C2	5560	E3	7674	E1	9927	B6
0025	G1	2293	B5	2696	C2	3357	B9	3626	C3	5601	E1	7685	D1	9929	B7
0042	A1	2294	B5	2697	C2	3358	C9	3627	C2	5652	D5	7686	D4	9930	B9
0043	C10	2296	A4	2698	C2	3359	B9	3628	C2	5653	D4	7675	A10	9931	B9
1001	D10	2297	A4	2650	C10	3360	B9	3630	C1	5677	D2	7678	C10	9932	C5
1015	C7	2298	B4	2652	B10	3362	C9	3631	C4	6014	D7	7677	B9	9933	B9
1032	C6	2299	A4	2653	A10	3363	C9	3651	E2	6019	D9	9001	C10	9934	C9
1033	D6	2300	B4	2680	C10	3364	D8	3652	C3	6020	D9	9002	C9	9937	D5
1135	A8	2301	B2	2675	A10	3365	C8	3653	C3	6034	C6	9003	C9	M001	H1
1136	A6	2302	A2	2676	A9	3370	C8	3654	E3	6042	B8	9004	D10	M002	G3
1272	B2	2303	A2	3001	C9	3401	F9	3655	D3	6050	B8	9010	C8	M007	A4
1540	F6	2304	A2	3002	D9	3402	F9	3656	D3	6051	B8	9011	C8	M3	A1
1679	D2	2305	A2	3003	D9	3403	F10	3657	C2	6052	C8	9012	C9	M4	F9
1685	A1	2306	A3	3004	D9	3404	F10	3658	D3	6053	C8	9013	B9	M5	G8
2001	C9	2307	A3	3010	D7	3405	F10	3659	D4	6115	D8	9014	B7	M6	F9
2002	D10	2309	B2	3011	D7	3406	E10	3660	C1	6116	D8	9015	D8		
2003	D9	2310	C3	3012	D7	3407	E10	3661	D1	6119	D6	9016	B7	TP1	C7
2004	D9	2321	B2	3015	D9	3408	G10	3662	B1	6120	D6	9018	B7	TP2	B3
2005	D8	2350	C8	3016	D8	3409	F10	3663	E1	6135	A8	9019	B8	TP3	B2
2006	D10	2351	C7	3017	D8	3410	E10	3664	E3	6170	A8	9020	B8	TP4	B2
2007	C7	2352	C8	3018	D9	3411	F10	3665	E2	6172	A5	9021	B7	TP5	B5
2008	D8	2353	D6	3019	D9	3412	F10	3666	H1	6289	E9	9022	C8	TP6	B5
2009	B7	2354	C9	3020	D9	3413	G10	3667	E3	6306	A2	9023	C8	TP7	B4
2010	D7	2355	C7	3021	D8	3414	F10	3668	D4	6365	C8	9024	C8	TP8	B4
2011	D7	2356	C8	3022	D8	3415	H10	3669	E3	6370	C7	9025	C8	TP9	B4
2013	D7	2359	C8	3023	C8	3416	H10	3670	E3	6415	G10	9026	C8	TP10	C8
2014	D7	2364	C8	3024	C7	3417	F10	3671	E1	6416	G10	9027	D6	TP11	C9
2015	C9	2366	C8	3025	C7	3418	E10	3672	E3	6443	E8	9028	B6	TP12	A2
2016	C8	2367	C8	3026	C7	3419	F10	3673	E1	6446	H8	9029	B6	TP13	C8
2017	D9	2368	C8	3027	D6	3440	H10	3674	E1	6449	F8	9030	B6	TP14	C8
2018	D9	2370	D4	3028	D6	3442	H10	3675	D5	6450	F8	9032	D6	TP15	H9
2019	C8	2371	C8	3029	C8	3443	G7	3676	E2	6451	F7	9101	D7	TP16	H9
2020	D8	2401	H10	3030	C8	3444	H9	3677	C5	6452	F8	9102	D8	TP17	H8
2021	C9	2402	F9	3031	C6	3445	H9	3678	E2	6470	F8	9135	B7	TP18	H10
2022	C8	2403	G10	3032	C6	3446	F9	3679	D3	6502	I3	9136	B7	TP19	H10
2025	D7	2404	F9	3033	C6	3447	G7	3680	D3	6503	I4	9137	B7	TP20	H3
2026	C8	2405	F10	3034	C7	3448	F8	3682	E1	6504	H4	9138	B6	TP21	F4
2027	D6	2413	H10	3035	C6	3449	F8	3683	D1	6505	H4	9139	A4	TP22	H4
2030	C6	2414	H10	3036	C9	3450	F8	3684	D1	6511	H4	9140	B6	TP23	F3
2037	C7	2415	G10	3037	B8	3451	F7	3685	E1	6513	F3	9141	B5	TP24	G4
2038	C7	2416	G10	3038	C7	3452	F8	3686	D3	6514	F3	9142	A7	TP25	E4
2041	B8	2417	F10	3039	C7	3453	G7	3687	D4	6515	F6	9143	B5	TP26	C1
2043	B8	2440	H10	3043	B9	3454	F7	3688	D4	6516	F6	9145	A5	TP27	E1
2044	B8	2441	E8	3044	B8	3455	G8	3689	D4	6517	G3	9146	B9	TP28	D2
2101	D8	2442	H9	3049	C8	3456	G8	3692	D1	6521	G3	9148	A6	TP29	D2
2102	D7	2443	E7	3050	B6	3457	G7	3693	D4	6522	F4	9260	D4	TP30	D2
2104	D7	2444	H10	3051	C6	3460	E9	3695	D1	6523	G4	9261	C5	TP31	D2
2110	D7	2445	H8	3052	B6	3461	E9	3696	D1	6530	H6	9262	A3	TP32	D3
2115	E6	2446	H7	3053	B6	3465	E9	3697	D1	6537	H6	9263	B4	TP34	A6
2117	E6	2447	H8	3054	B7	3470	F9	3698	D1	6540	F6	9264	B4	TP35	A7
2118	D6	2448	G7	3055	B6	3501	H3	3699	H1	6545	E5	9265	A2	TP36	A7
2120	D6	2449	E8	3101	D5	3504	F1	3850	A10	6549	F5	9266	H4	TP37	B4
2124	D5	2450	H7	3102	D5	3509	G4	3851	B10	6553	E5	9267	C5		
2125	D5	2451	F7	3103	D5	3510	H4	3852	A9	6554	H5	9268	C3		
2126	D5	2452	F7	3116	E6	3511	H4	3853	B10	6555	G6	9269	B4		
2127	D5	2453	E8	3117	E6	3513	F3	3854	C10	6557	G6	9270	A4		
2128	D5	2460	E9	3118	D8	3514	H3	3855	B10	6558	G6	9271	C5		
2135	A5	2465	E10	3119	D6	3515	H4	3856	B10	6559	H6	9272	C5		
2137	A8	2470	F8	3120	D6	3516	H4	3857	B9	6561	H6	9273	B5		
2138	A6	2500	G2	3124	D5	3517	G4	3858	A10	6562	F1	9274	B5		
2139	A6	2501	G2	3127	D6	3518	H4	3860	C10	6565	E1	9401	F9		
2140	A7	2502	I4	3135	A8	3520	H4	3862	A10	6568	F2	9402	E8		
2142	A7	2503	G2	3136	A9	3521	G3	3865	A9	6569	F8	9403	E9		
2143	A8	2504	H4	3137	A8	3522	F3	3866	A10	6570	F6	9441	G7		
2144	A8	2505	H5	3138	A7	3523	G3	3871	B9	6573	F5	9442	E7		
2145	A7	2506	H5	3141	A8	3525	G3	3875	A10	6602	E4	9443	F9		
2146	A7	2507	H4	3142	A8	3526	F4	3876	A10	6603	F1	9444	E9		
2147	A7	2509	G3	3143	A5	3530	G4	3878	B9	6604	F1	9445	H8		
2148	A7	2511	H4	3148	A7	3530	G4	3879	C10	6605	E1	9450	F8		
2149	A7	2514	F4	3149	A7	3533	I6	3880	B10	6606	C2	9451	E6		
2150	A8	2515	F4	3150	A9	3534	I6	3881	B9	6658	D4	9452	F8		
2152	A9	2517	G4	3151	A7	3535	I6	3882	B9	6663	H1	9453	H10		
2153	A9	2520	F3	3152	A9	3536	H6	3883	B10	6677	C5	9454	F7		
2154	A5	2522	F4	3154	A5	3544	F5	3901	C5	6679	D4	9455	F8		
2155	A5	2523	G4	3155	A5	3547	F6	3902	B9	6649	B9	9456	F9		
2157	A5	2524	F4	3156	A5	3549	F6	5010	D8	6850	B10	9501	H3		
2158	A4	2525	G4	3157	A8	3550	F6	5012	D7	6851	D7	9502	G4		
2160	A4	2530	H6	3158	A9	3551	H6	5018	B7	6852	B10	9506	E5		
2161	A4	2532	G6	3159	A5	3552	F6	5030	B7	6853	B10	9507	G6		
2162	A1	2533	I6	3160	A1	3553	H6	5032	C6	6854	B10	9508	E2		
2164	A5	2534	G6	3161	A1	3554	F5	5040	B8	6855	B10	9509	F4		
2169	A7	2536	H6	3162	A4	3555	G6	5043	B8	6865	A10	9510	F3		
2170	A8	2540	F6	3163	B6	3556	F6	5102	D8	7002	D10	9511	E5		
2171	A8	2545	F5	3169	A8	3557	E5	5104	D7	7015	C8	9512	E5		
2172	A6	2547	F6	3170	A8	3558	F5	5106	D7	7027	D6	9513	G3		
2174	A6	2550	F6	3171	A9	3559	F6	5138	A6	7030	C8	9514	E3		
2175	A6	2553	F5	3172	A8	3560	F2	5139	A6	7038	C7	9515	G4		
2176	A5	2554	H5	3173	A8	3561	F2	5177	A6	7050	B6	9516	G6		
2254	B3	2555	F6	3175	A6	3562	F2	5250	B3	7125	D5	9517	F6		
2255	B5	2556	F6	3176	A6	3563	F6	5251	C5	7135	A7	9554	H6		
2256	B4	2560	G6	3251	C5	3565	E1	5255	B4	7156	A9	9602	C4		
2257	B4	2561	E2	3252	B5	3566	F1	5258	B3	7157	A4	9603	D3		
2258	B3	2562	F5	3253	B5	3567	F2	5259	B3	7158	A5	9604	E2		
2259	B3	2563	F6	3289	C5	3568	H6	5284	B4	7170	A8	9605	E2		
2260	B3	2573	G6	3290	C5	3569	E2	5285	B4	7221	A2	9606	E2		
2261	B3	2602	E4	3291	D5	3570	G6	5286	B4	7250	D2	9607	E2		
2262	A3	2606	C1	3292	C5	3571	G6	5296	A4	7251	B3	9609	C1		
2263	B3	2610	D3	3293	B5	3572	G6	5320	A3	7255	C3	9610	D1		
2264	A3	2611	D3	3294	D5	3573	G6	5440	H10	7256	C3	9611	D1		
2265	B2	2615	C1	3296	A4	3574	G6	5441	H9	7280	B4	9612	C1		
2266	B2	2620	C1	3303											

TP1	C7
TP2	B3
TP3	B2
TP4	B2
TP5	B5
TP6	B5
TP7	B4
TP8	B4
TP9	B4
TP10	C8
TP11	C9
TP12	A2
TP13	C8
TP14	C8
TP15	H9
TP16	H9
TP17	H8
TP18	H10
TP19	H10
TP20	H3
TP21	F4
TP22	H4
TP23	F3
TP24	G4
TP25	E4
TP26	C1
TP27	E1
TP28	D2
TP29	D2
TP30	D2
TP31	D2
TP32	D3
TP34	A6
TP35	A7
TP36	A7
TP37	B4

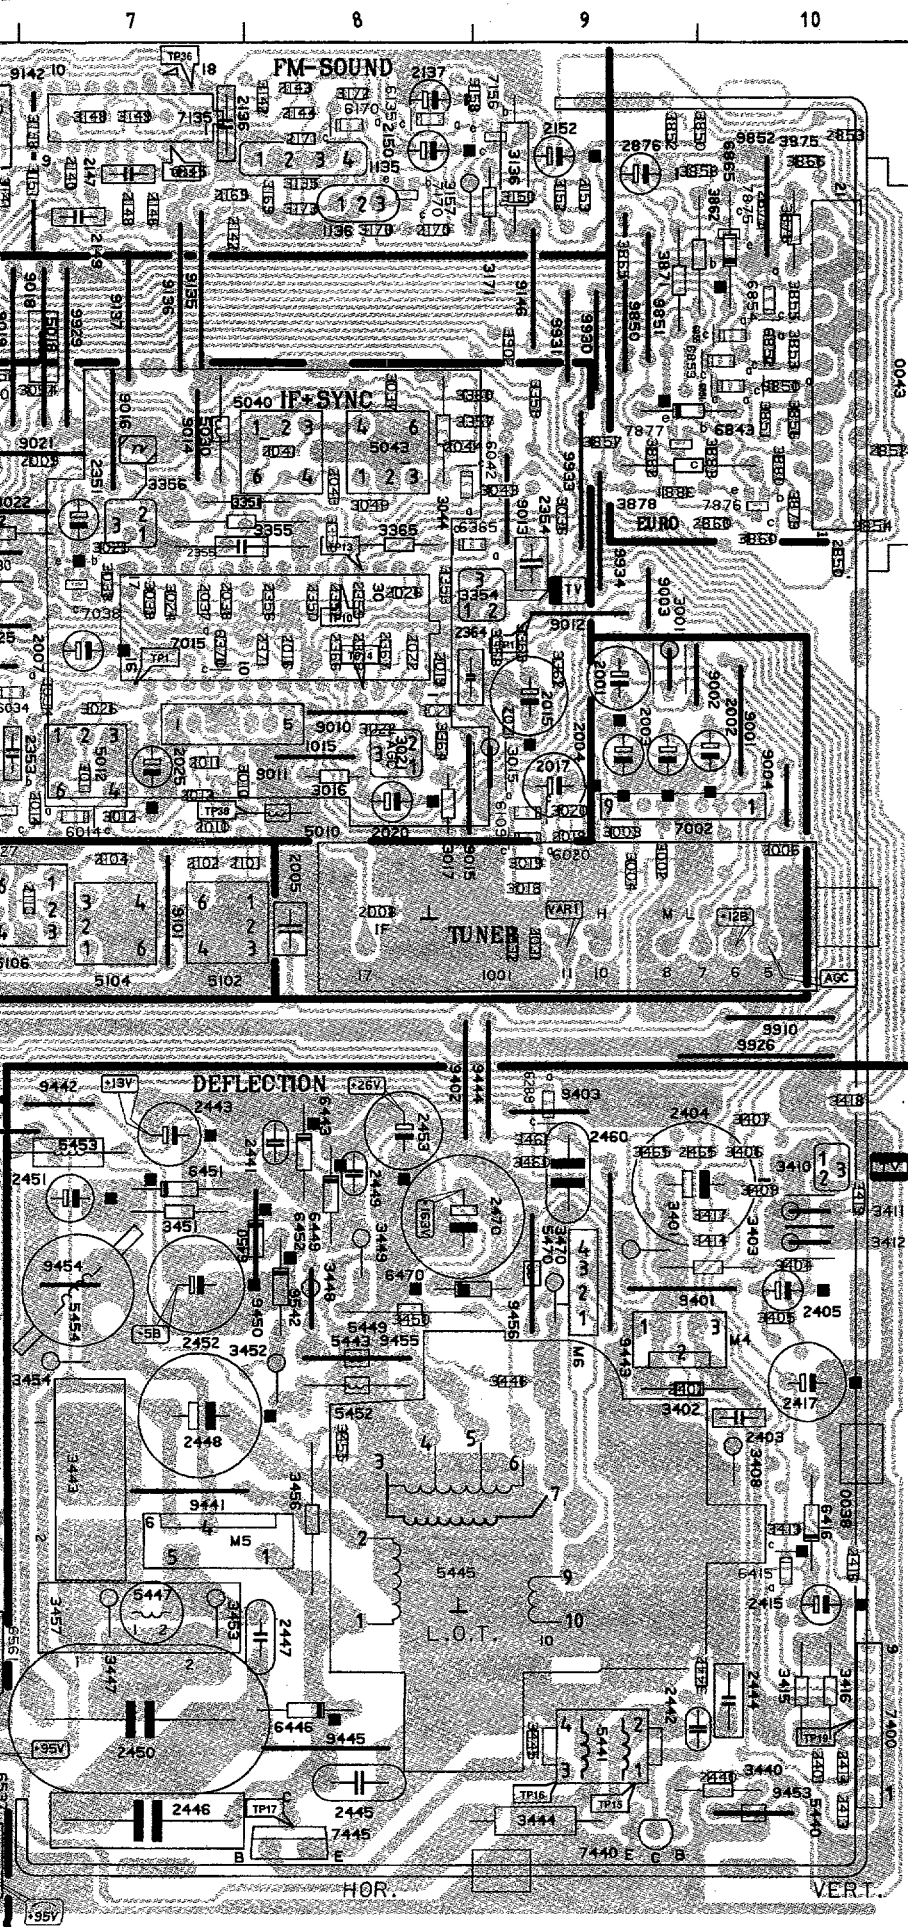

A



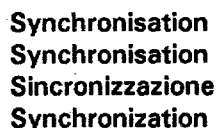



POS NR	SYSTEM 4	SYSTEM 5
3050	3k3	3k3
3365	2M2	2M2
6050	1N4148	1N4148
6365	LL4148	LL4148

SYSTEM 4: PAL BG ;SECAM BGLL'
SYSTEM 5: PAL BGI ;SECAM BGLL'

ONLY FOR REMOTE
CONTROL SETS**

MEASURED IN  
RESPECT TO
MISURATO NEI
CONFRONTI

Horizontal
Orizzontale
Horizontal
Horizontal


SOPS REPAIR KIT
SBC 7021
4822 210 20491

Deflection


Vertical
Verticale
Vertical
Vertical

**	14"	15"/17"	21"	**	14"	15"/17"	21"
2402	47k	47n	100n	3445	68R	68R	47R
2404	1500µ	1500µ	3300µ	3448	1R0	1R0	JMP
2405	22µ	22µ	10µ	3452	10R	10R	15R
2443	220µ	220µ	470µ	3454	---	10R	10R
2450	560n	330n	470n	3455	18k	18k	12k
2517	680n	680n	1µ	3456	430k	430k	330k
3353	47k	47k	62k	3460	11k	11k	10k
3354	100k	100k	22k	3470	4R7	4R7	8R2
3355	27k	27k	30k	3517	120	120	68R
3356	10k	10k	68k	3530	270	270	180
3358	100k	100k	43k	3533	480/2	480/2	47k
3364	360k	360k	330k	3534	3k3	3k3	3k0
3401	2k4	2k4	---	3440	22µ	22µ	JMP
3403	3k3	3k3	3k0	3443	10µ	10µ	JMP
3404	2k0	2k4	4k3	3449	47µ	47µ	27µ
3405	150	150	15R	3454	10µ	10µ	JMP
3406	12k	15k	19k	3470	10µ	10µ	JMP
3407	18k	22k	18k	3503	47µ	47µ	JMP
3408	2k4	2k4	680	3521	1µ0	1µ0	JMP
3411	4R3	3R6	2R0	3524	1µ0	1µ0	JMP
3412	4R3	2R7	2R7	3534	3µ3	3µ3	JMP
3415	2k0	2k0	1k6	3540	47µ	47µ	JMP
3419	JMP	JMP	100	3449	BYD33D	BYD33D	BYT25B


SK1	H2	3523	J5
SK1	L2	3525	M1
1500	H2	3526	L6
1540	A9	3530	I7
2350	A6	3533	H11
2351	A5	3534	L11
2352	B3	3535	I11
2353	B2	3536	I12
2354	C9	3544	M8
2355	D3	3547	N9
2358	B9	3549	O9
2364	E7	3550	N9
2366	F9	3551	M12
2367	E7	3552	O15
2368	E9	3553	M11
2370	E5	3554	L11
2371	F5	3555	O12
2401	I15	3556	O15
2402	I20	3557	M1
2404	L20	3558	I8
2405	L19	3559	O13
2413	I16	3560	K12
2414	I15	3561	K11
2415	I18	3562	K11
2416	H19	3563	N10
2417	H19	3565	L13
2440	D12	3566	L9
2441	F19	3567	K9
2442	D13	3568	N10
2443	F20	3569	L10
2444	C13	3570	I9
2445	C15	3571	I9
2446	C16	3572	H11
2447	B15	3573	I10
2448	B14	3574	I11
2449	G19	3575	K10
2450	E14	3576	C11
2451	E15	3577	C13
2452	E20	3578	F18
2453	O19	3579	A17
2454	B18	3580	A16
2455	E19	3581	O18
2456	E19	3582	E18
2470	D20	3583	E18
2500	I2	3584	D15
2501	H3	3585	D19
2502	I5	3586	I3
2503	I5	3587	I3
2504	H5	3588	K3
2505	H7	3589	J5
2506	G7	3590	L6
2507	G7	3591	J7
2511	L3	3592	G7
2515	L4	3593	I7
2517	L5	3594	H12
2520	L1	3595	O8
2522	L1	3596	O8
2523	L12	3597	O8
2524	J7	3598	G12
2525	J6	3599	M9
2530	H9	3600	H8
2532	G8	3601	K11
2533	I12	3602	D2
2534	B5	3603	O2
2536	I12	3604	C2
2540	G10	3605	C2
2545	M9	3606	B2
2547	O9	3607	F6
2548	O9	3608	J15
2553	H12	3609	H18
2554	H9	3610	F19
2555	O12	3611	C15
2556	O12	3612	F19
2560	K12	3613	E15
2561	K13	3614	E15
2562	K9	3615	D19
2563	N11	3616	I6
2573	J11	3617	I6
3050	D12	3618	O6
3051	D12	3619	O6
3117	B2	3620	K2
3350	A6	3621	L2
3351	A5	3622	L2
3353	C9	3623	L5
3354	C10	3624	L5
3355	A8	3625	L5
3358	C10	3626	L5
3359	B9	3627	L5
3362	E10	3628	L5
3364	F7	3629	L13
3365	F7	3630	O9
3370	E5	3631	M8
3401	K20	3632	O9
3402	I20	3633	L11
3403	K19	3634	H9
3404	K20	3635	N13
3405	K19	3636	N13
3406	K19	3637	N14
3407	L19	3638	N14
3408	K20	3639	O13
3410	L19	3640	L11
3411	L20	3641	L12
3412	L20	3642	K10
3413	J17	3643	L9
3415	J18	3644	L11
3416	J19	3645	A3
3419	M19	3646	H16
3440	C11	3647	C12
3442	D13	3648	B14
3443	A16	3649	K3
3444	B13	3650	K3
3445	C14	3651	K3
3446	C18	3652	K4
3447	A16	3653	K4
3448	F19	3654	K6
3449	G18	3655	H12
3450	D19	3656	K10
3451	E15	3657	O11
3452	E19	3658	O12
3453	D19	3659	O15
3454	D14	3660	K12
3455	C16	3661	K12
3456	C16	3662	K12
3457	B16	3663	J10
3460	C19	3664	D14
3461	C19		
3465	D19		
3470	D18		
3501	I4		
3504	J1		
3509	J1		
3510	K1		
3511	K2		
3514	J3		
3515	J4		
3516	J4		
3517	L4		
3518	L4		
3520	J4		
3520	K5		
3522	K6		

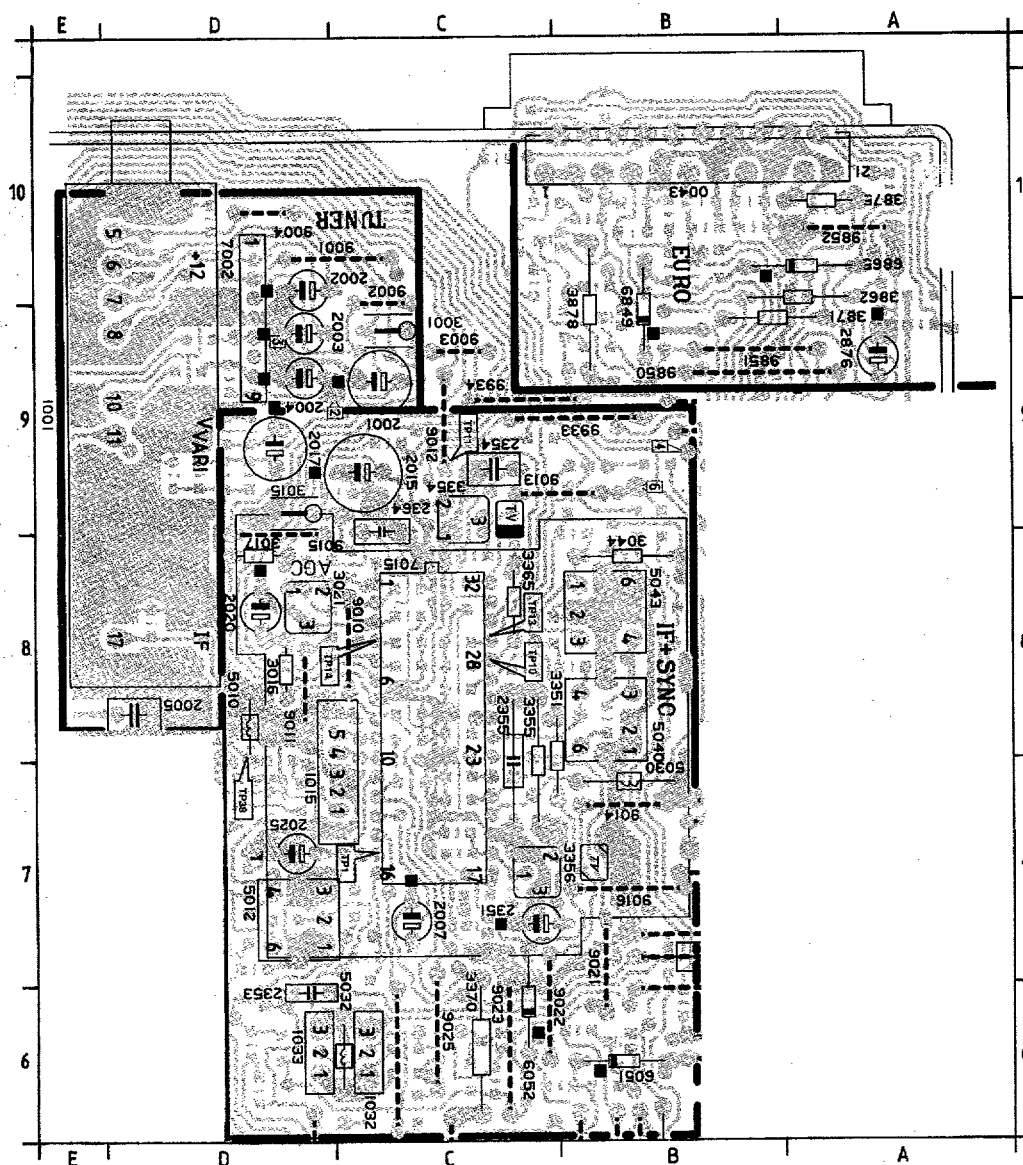



0043	C10	9924	C8
1001	D10	9025	C8
1015	C7	9026	C8
1032	C6	9135	B7
2001	C9	9136	B7
2002	D10	9137	B7
2003	D9	9146	B9
2004	D9	9850	B9
2005	D8	9851	B9
2007	C7	9852	A10
2015	C9	9929	B7
2017	D9	9930	B9
2020	D8	9931	B9
2351	C7	9933	B9
2354	C9	9934	C9
2355	C7	TP1	C7
2364	C8	TP10	C8
3001	C9	TP11	C9
3015	D9	TP13	C8
3018	D8	TP14	C8
3017	D8		
3021	D8		
3044	B8		
3351	C8		
3354	C8		
3355	C7		
3356	C7		
3365	C8		
3370	C8		
3862	A10		
3871	B9		
3875	A10		
3878	B9		
5010	D8		
5018	B7		
5030	B7		
5032	C6		
5040	B8		
5043	B8		
5102	D8		
6052	C8		
6849	B9		
6865	A10		
7002	D10		
7015	C8		
9001	C10		
9002	C9		
9003	C9		
9004	D10		
9010	C8		
9011	D8		
9012	C9		
9013	B9		
9014	B7		
9015	D8		
9016	B7		
9018	B7		
9021	B7		
9022	C6		
9023	C6		

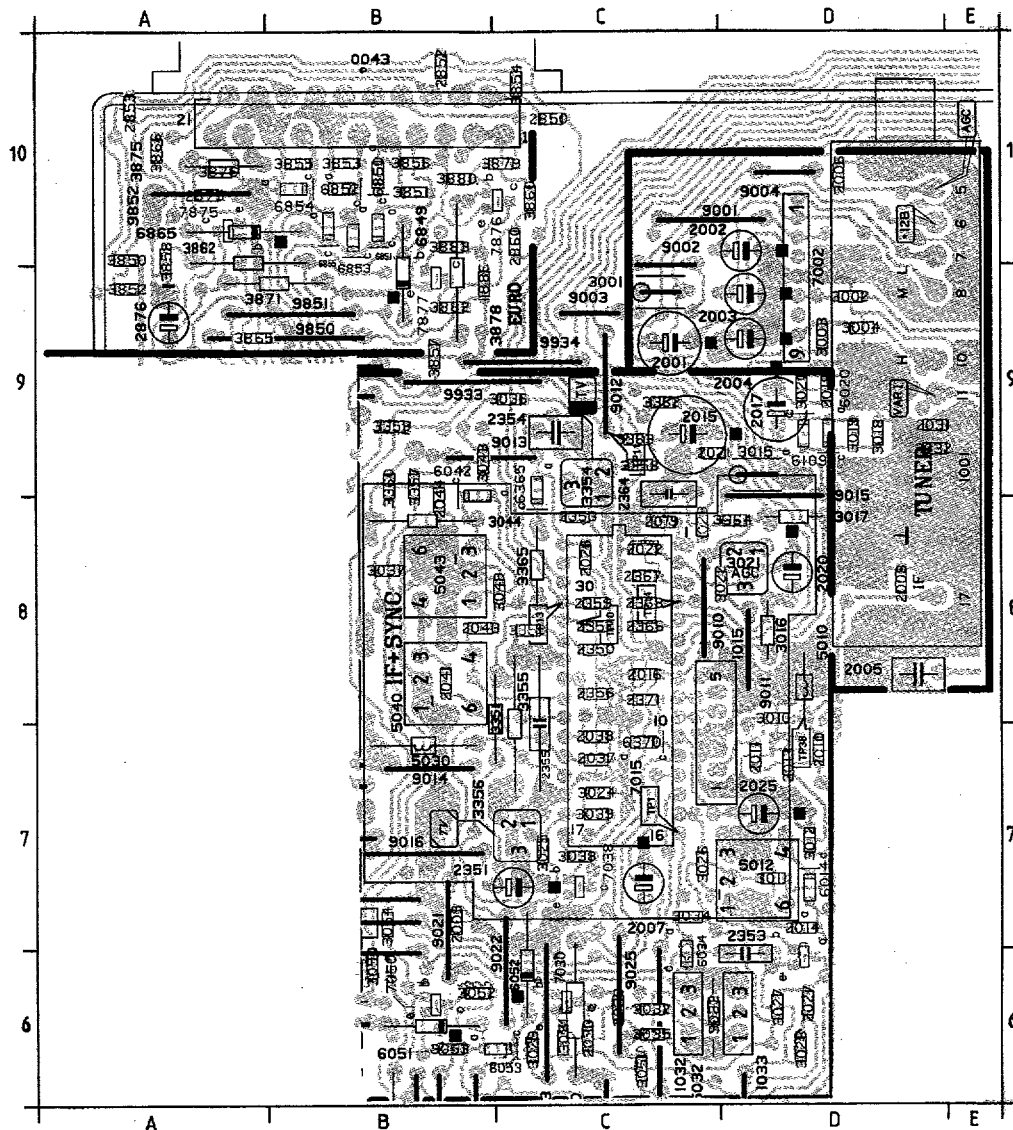

0043	C10	3022	D8	5040	B8
1001	D10	3023	C8	5043	B8
1015	C7	3024	C7	5102	D8
1032	C6	3025	C7	6019	D9
1033	D6	3026	C7	6020	D9
2001	C9	3029	C6	6034	C6
2002	D10	3030	C6	6042	B8
2003	D9	3031	C6	6051	B6
2004	D9	3032	C6	6052	C6
2005	D6	3033	C6	6053	C6
2006	D10	3034	C7	6365	C8
2007	C7	3035	C8	6370	C7
2008	D8	3036	C9	6649	B9
2009	B7	3037	B8	6850	B10
2015	C9	3038	C7	6851	B10
2016	C8	3039	C7	6852	B10
2017	D9	3043	B9	6853	B10
2018	D9	3044	B8	6854	B10
2019	C8	3049	C8	6855	B10
2020	D8	3051	C8	6865	A10
2021	C9	3054	B7	7002	D10
2022	C8	3350	C8	7015	C8
2026	C8	3351	C8	7030	C8
2030	C8	3353	C8	7038	C7
2037	C7	3354	C8	7875	A10
2038	C7	3355	C7	7876	C10
2041	B8	3356	C7	7877	B9
2043	B8	3357	B9	8001	C10
2044	B8	3358	C9	8002	C9
2101	D8	3359	B8	8003	C9
2350	C8	3360	B8	8004	D10
2351	C7	3362	C9	8010	C8
2352	C8	3363	C9	8011	D8
2353	D6	3364	D8	8012	C9
2354	C9	3365	C8	8013	B9
2355	C7	3370	C6	8014	B7
2356	C8	3850	A10	8015	D8
2359	C8	3851	B10	8016	B7
2364	C8	3853	B10	8021	B7
2366	C8	3854	C10	8022	C8
2367	C8	3855	B10	8023	C8
2368	C8	3856	B10	8024	C6
2371	C8	3857	B9	8025	C6
2850	C10	3858	A10	8026	C6
2852	B10	3880	C10	8850	B9
2853	A10	3862	A10	8851	B9
2860	D10	3866	A10	8852	A10
2876	A9	3871	B9	8933	B9
2875	A10	3875	A10	8934	C9
3001	C9	3876	A10	TP1	C7
3002	D9	3878	B9	TP10	C8
3003	D9	3879	B10	TP11	C9
3004	D9	3880	C10	TP13	C8
3015	D9	3881	B9	TP14	C8
3016	D8	3882	B9		
3017	D8	3883	B10		
3018	D9	3902	B9		
3019	D9	5010	D8		
3020	D8	5030	B7		
3021	D8	5032	C6		

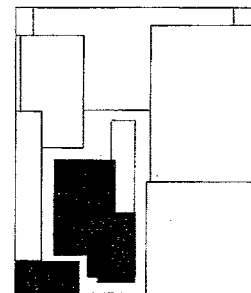

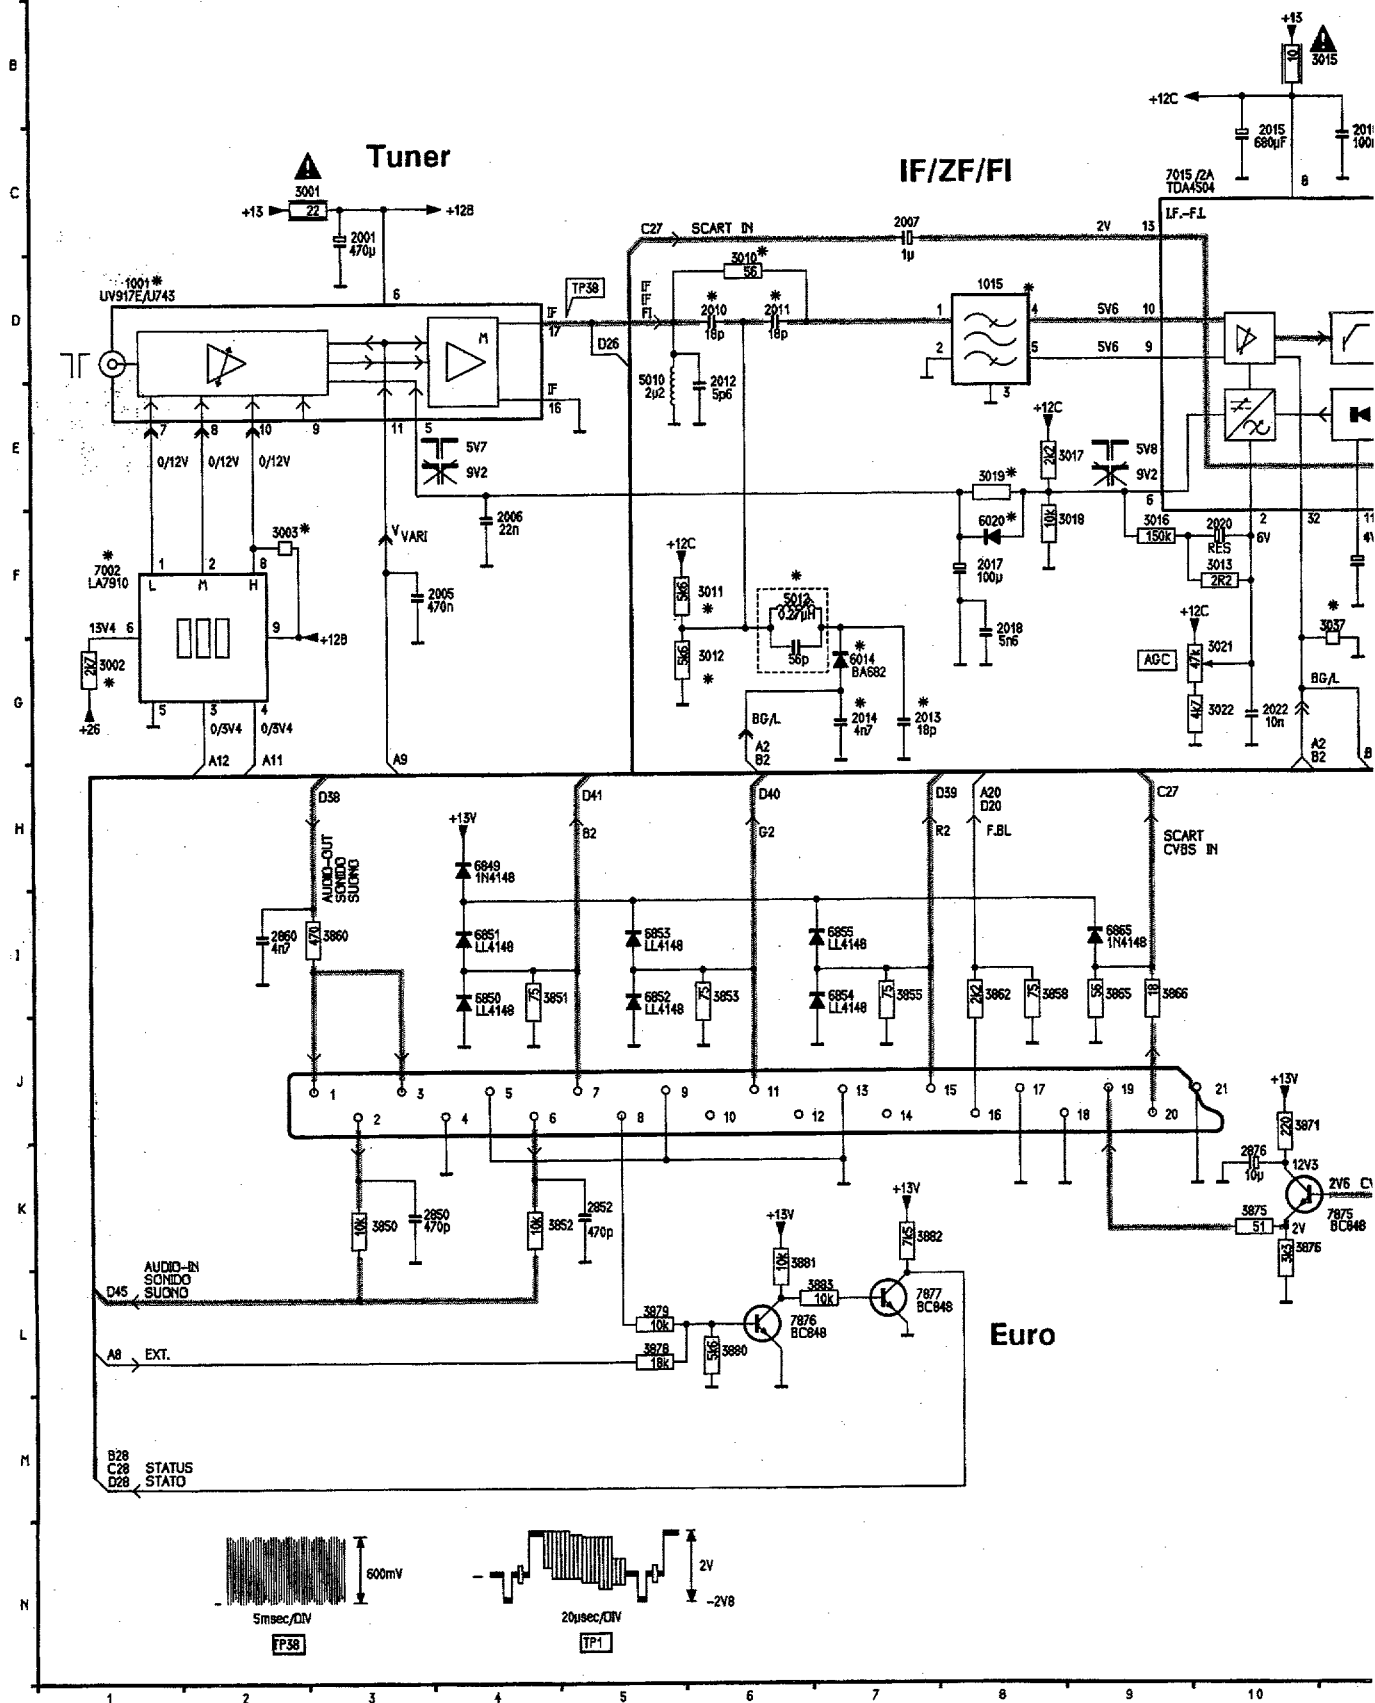C

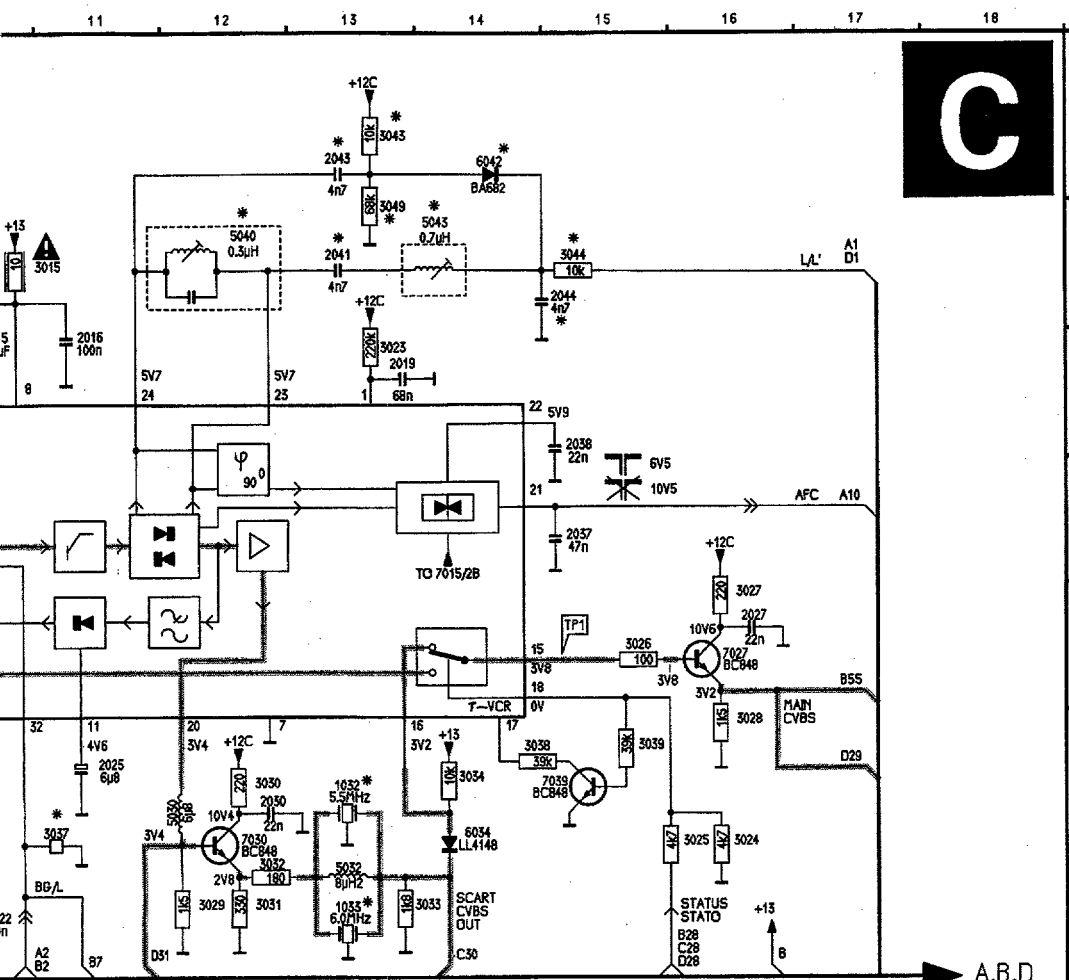

Source selection video
Bildquellenwahl
Selezione sorgenti dell' immagine
Sélection source image

POS NR	SYSTEM 1	SYSTEM 2	SYSTEM 3	SYSTEM 4	SYSTEM 5
1001	UV917	U743	UV917	UV917	UV917
1015	OFWJG1961	OFWJG1951	OFWJG2250	OFWJG3950	OFWJG3950
1032	5.5MHz	6.0MHz	5.5MHz	5.5MHz	5.5MHz
1033	-	-	-	-	-
2010	-	-	-	18p	18p
2011	-	-	-	18p	18p
2013	-	-	-	18p	18p
2014	-	-	-	4n7	4n7
2026	-	-	-	22n	22n
2041	-	-	-	4n7	4n7
2043	-	-	-	4n7	4n7
2044	-	-	-	4n7	4n7
3002	2k7	-	2k7	-	2k7
3003	-	JMP	-	56E	56E
3010	JMP	JMP	JMP	5K6	5K6
3011	-	-	-	5K6	5K6
3012	JMP	JMP	JMP	5K6	5K6
3019	JMP	JMP	JMP	JMP	JMP
3036	JMP	JMP	JMP	-	-
3037	-	-	-	10k	10k
3043	-	-	-	10k	10k
3044	-	-	-	68k	68k
3049	-	-	-	0.28uH	0.28uH
5012	-	-	-	0.30uH	0.30uH
5040	0.19uH	0.19uH	0.19uH	0.70uH	0.70uH
5043	-	-	-	BA682	BA682
6014	-	-	-	LLZ-C2V4	LLZ-C2V4
6020	-	-	-	BA682	BA682
6042	-	-	-	LA7910	LA7910
7002	LA7910	-	LA7910	-	-





SYSTEM 1: PAL BG
SYSTEM 2: PAL I
SYSTEM 3: PAL BG; SECAM BGDK
SYSTEM 4: PAL BG; SECAM BGLL
SYSTEM 5: PAL BG; SECAM BGLL



ESV.00345
T28/123

A
B
C
D
E
F
G
H
I
J
K
L
M
N

- 1001 D1
- 1015 D8
- 1032 F13
- 1033 G13
- 2001 C3
- 2005 F4
- 2006 F4
- 2007 C7
- 2010 D6
- 2011 D6
- 2012 E6
- 2013 G7
- 2014 G7
- 2015 C10
- 2016 C11
- 2017 F8
- 2018 G8
- 2019 C13
- 2020 F10
- 2022 G10
- 2025 F11
- 2027 E16
- 2030 F12
- 2037 D15
- 2038 C15
- 2041 B13
- 2043 A13
- 2044 A15
- 2850 K3
- 2852 K5
- 2860 I2
- 2876 K10
- 3001 C3
- 3002 G1
- 3003 F2
- 3010 D6
- 3011 F6
- 3012 G6
- 3013 F10
- 3015 B11
- 3016 F9
- 3017 E9
- 3018 F9
- 3019 E8
- 3021 G10
- 3022 G10
- 3023 C13
- 3024 G16
- 3025 G16
- 3026 E15
- 3027 E16
- 3028 F16
- 3029 G12
- 3030 F12
- 3031 G12
- 3032 G12
- 3033 G13
- 3034 F14
- 3037 F11
- 3038 F14
- 3039 F15
- 3043 A13
- 3044 B13
- 3049 B13
- 3850 K3
- 3851 I4
- 3852 K5
- 3853 I6
- 3855 I7
- 3858 I9
- 3860 I3
- 3862 I8
- 3865 I9
- 3866 I9
- 3871 J10
- 3875 K10
- 3876 K10
- 3878 L5
- 3879 L5
- 3880 L6
- 3881 L6
- 3882 K7
- 3883 L7
- 5010 E5
- 5012 F6
- 5030 F12
- 5032 G13
- 5040 B12
- 5043 B14
- 6014 G7
- 6020 F8
- 6034 F14
- 6042 A14
- 6049 H4
- 6850 I4
- 6851 I4
- 6852 I5
- 6853 I5
- 6854 I7
- 6855 I7
- 6855 I9
- 7002 F1
- 7015 C9
- 7027 E16
- 7030 G12
- 7039 F15
- 7875 K11
- 7876 L6
- 7877 L7

0042 A1	9281 C5
1033 D8	9282 A3
1135 A8	9283 B4
1136 A8	9284 B4
1272 B2	9285 A2
1665 A1	9286 B4
2025 D7	9287 C5
2124 D5	9288 C3
2126 D5	9289 B4
2127 D5	9270 A4
2128 D5	9271 C5
2135 A5	9272 C5
2137 A8	9273 B5
2138 A6	9274 B5
2139 A6	9902 C4
2147 A7	9918 C2
2149 A7	9911 D5
2150 A8	9912 C5
2152 A9	9913 C5
2155 A5	9915 D5
2157 A5	9916 D5
2160 A4	9917 C5
2161 A4	9918 C4
2162 A1	9919 C4
2263 B3	9925 C5
2265 B2	9927 B6
2270 A3	9929 B7
2277 A3	9932 C5
2296 A4	9937 D5
2353 D6	M007 A4
2623 C3	M3 A1
2624 C3	TP12 A2
2629 C3	TP2 B3
2630 C3	TP3 B2
2876 A9	TP34 A6
3055 B6	TP35 A7
3124 D5	TP36 A7
3136 A9	TP37 B4
3157 A8	TP4 B2
3159 A5	TP5 B5
3163 B6	TP6 B5
3171 A9	TP7 B4
3291 D5	TP8 B4
3296 A4	TP9 B4
3308 A2	
3320 A3	
3321 C2	
3606 C4	
3616 C2	
3622 C3	
3623 C2	
3626 C3	
3631 C4	
3652 C3	
3653 C3	
5012 D7	
5018 B7	
5030 B7	
5104 D7	
5106 D7	
5138 A6	
5139 A6	
5177 A6	
5250 B3	
5251 C5	
5255 B4	
5258 B3	
5259 B3	
5284 B4	
5285 B4	
5286 B4	
5296 A4	
5320 A3	
5652 D5	
6050 B6	
6051 B6	
6677 C5	
7125 D5	
7135 A7	
7157 A4	
7221 A2	
7250 B2	
7280 B4	
9014 B7	
9016 B7	
9018 B7	
9019 B6	
9020 B6	
9021 B7	
9027 D6	
9028 B6	
9029 B6	
9030 B6	
9032 D6	
9101 D7	
9102 D6	
9135 B7	
9136 B7	
9137 B7	
9138 B6	
9139 A4	
9140 B6	
9141 B5	
9142 A7	
9143 B5	
9145 A5	
9148 A6	
9260 B4	

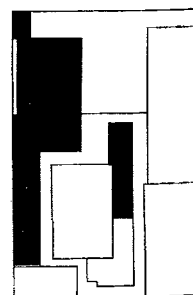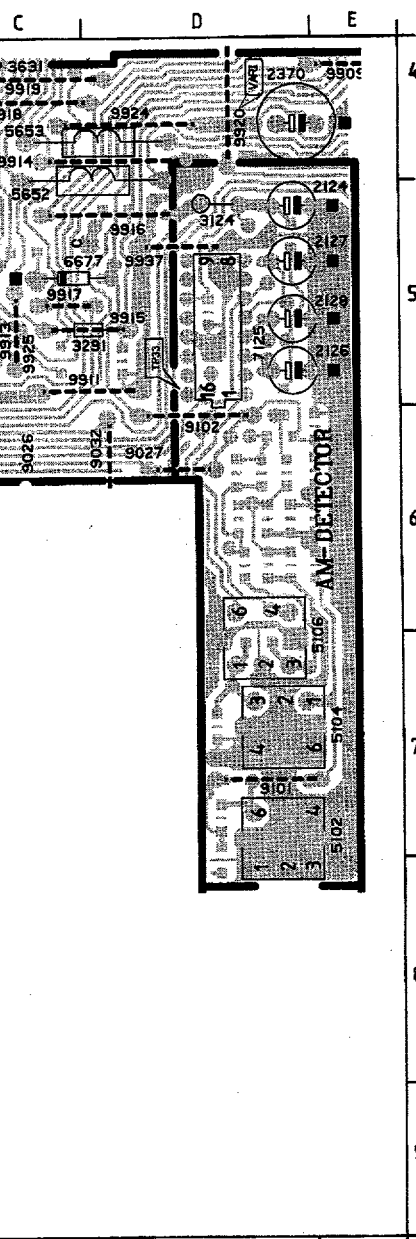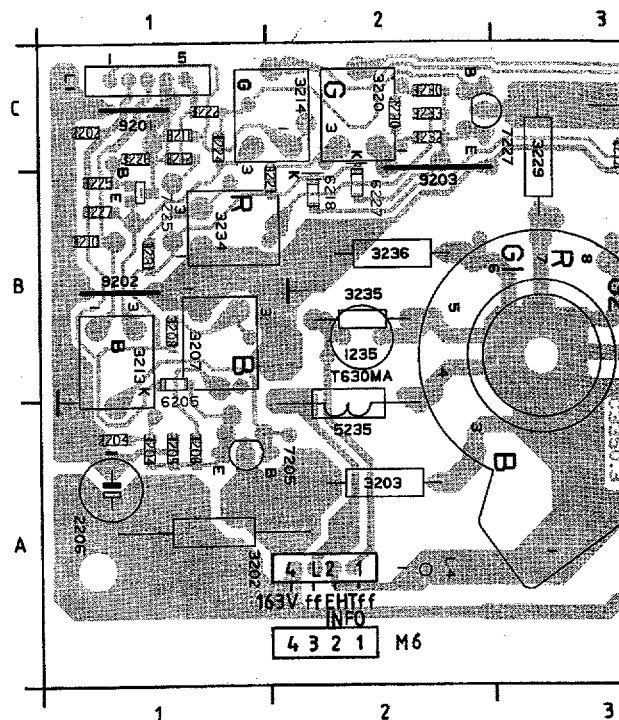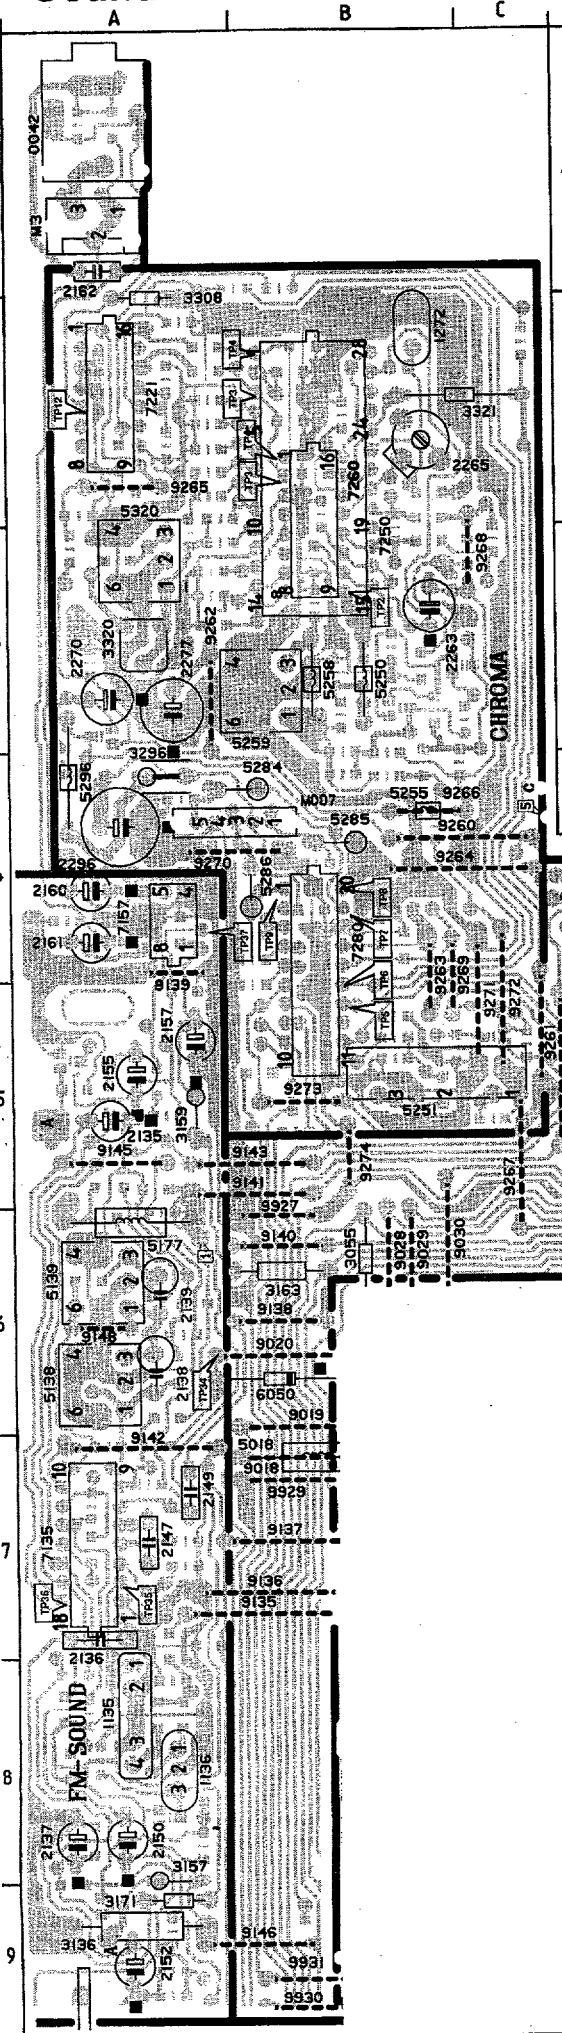

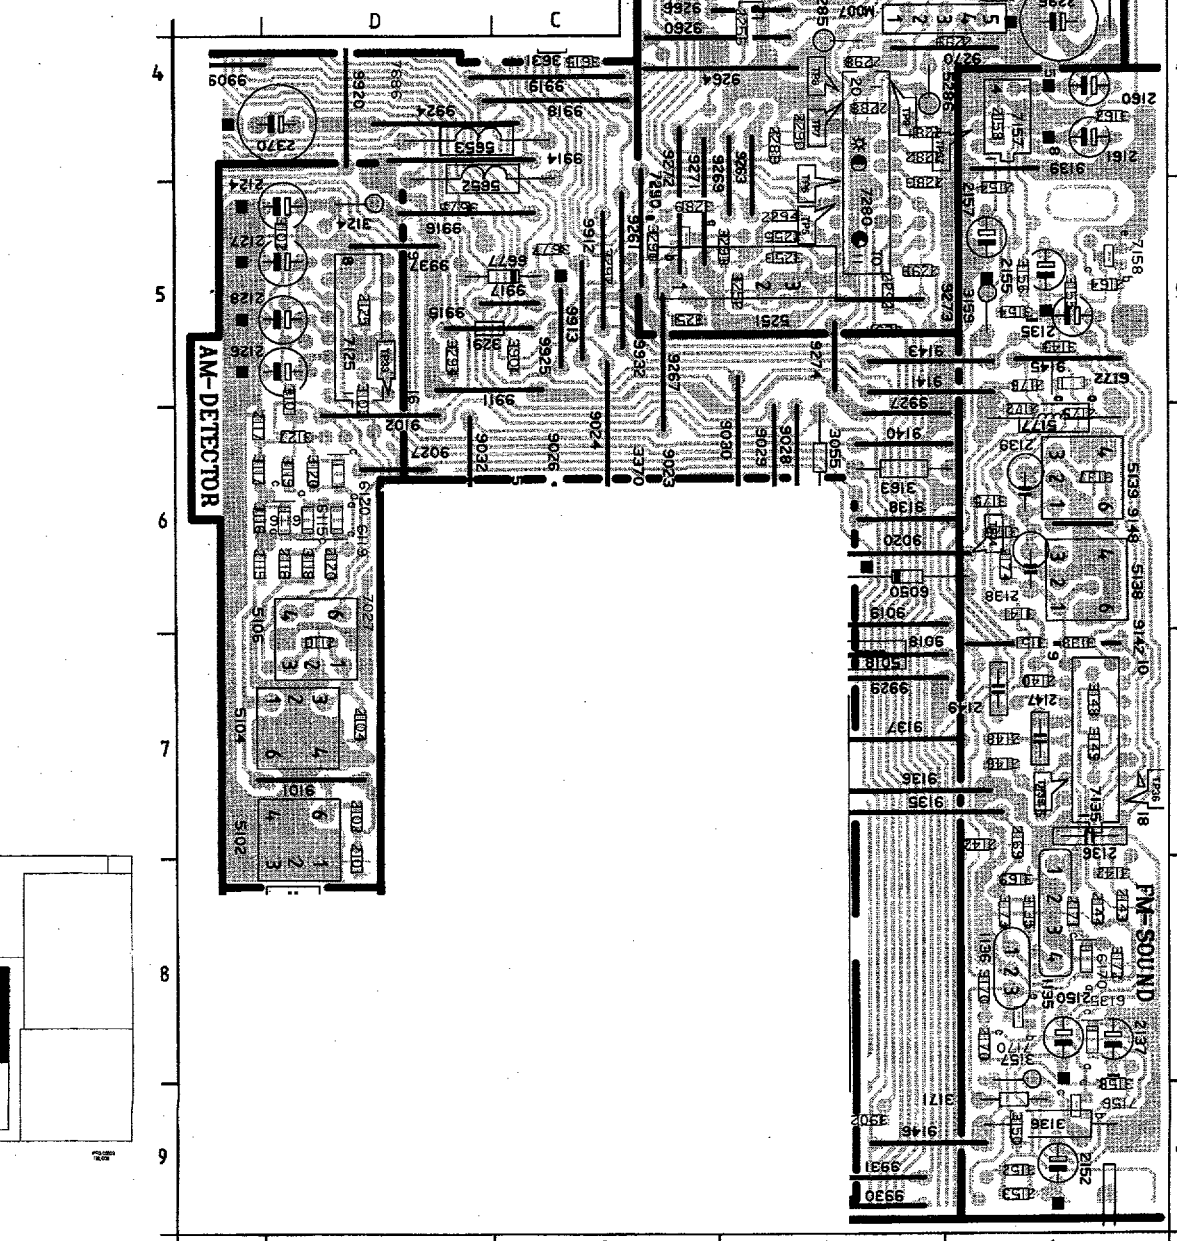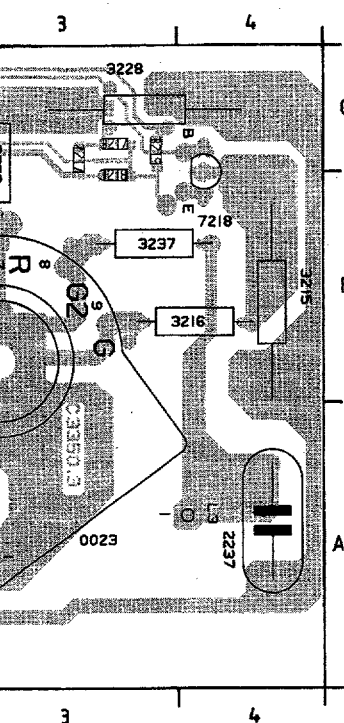

L1	C1	3224	C1
L2	A2	3225	B1
L3	A4	3226	C1
L4	A2	3227	B1
1235	B2	3228	C3
2202	C1	3229	C3
2204	A1	3230	C2
2206	A1	3231	B1
2217	C3	3232	C2
2230	C2	3233	C2
2237	A4	3234	B2
3202	A1	3235	B2
3203	A2	3236	B2
3204	A1	3237	B3
3205	A1	5235	A2
3206	A1	6205	B1
3207	B1	6218	B2
3208	B1	6227	B2
3210	B1	7205	A1
3211	C1	7218	C4
3212	C1	7225	B1
3213	A1	7227	C2
3214	C2	9201	C1
3215	B4	9202	B1
3216	B4	9203	C2
3217	C3		
3218	B3		
3219	C3		
3220	C2		
3221	B2		
3222	C1		

0042	A1	3053	B6	6679	D4
1033	D6	3055	B6	7027	D6
1135	A8	3101	D5	7050	B6
1136	A8	3102	D5	7125	D5
1272	B2	3103	D5	7135	A7
2010	D7	3118	D6	7158	A9
2011	D7	3119	D6	7157	A4
2013	D7	3120	D6	7158	A5
2014	D7	3124	D5	7170	A8
2025	D7	3127	D8	7221	A2
2027	D6	3135	A8	7250	B2
2102	D7	3136	A9	7251	B3
2104	D7	3137	A6	7255	A3
2110	D7	3138	A7	7280	B4
2118	D6	3141	A6	7290	C5
2120	D6	3142	A8	7686	D4
2124	D5	3143	A5	9019	B6
2125	D5	3148	A7	9020	B6
2126	D5	3149	A7	9027	D6
2127	D5	3150	A9	9028	B6
2128	D5	3151	A7	9029	B6
2135	A5	3152	A9	9030	B6
2137	A8	3154	A5	9032	D6
2138	A6	3155	A5	9101	D7
2139	A6	3156	A5	9102	D6
2140	A7	3157	A8	9138	B6
2142	A7	3158	A9	9139	A4
2143	A8	3159	A5	9140	B6
2144	A8	3160	A1	9141	B5
2145	A7	3161	A1	9142	A7
2146	A7	3162	A4	9143	B5
2147	A7	3163	B6	9145	A5
2148	A7	3169	A8	9148	A6
2149	A7	3170	A8	9260	B4
2150	A8	3171	A9	9261	C5
2152	A9	3172	A8	9262	A3
2153	A9	3173	A8	9263	B4
2154	A5	3175	A6	9264	B4
2155	A5	3176	A6	9265	A2
2157	A5	3251	C5	9266	B4
2158	A4	3252	B5	9267	C5
2160	A4	3253	B5	9269	B4
2161	A4	3269	C5	9270	A4
2162	A1	3290	C5	9271	C5
2164	A5	3291	D5	9272	C5
2169	A7	3292	C5	9273	B5
2170	A8	3293	B5	9274	B5
2171	A8	3294	D5	9602	C4
2172	A6	3296	A4	9811	D5
2174	A6	3303	A2	9812	C5
2175	A6	3304	A2	9813	C5
2176	A5	3305	B4	9814	D4
2253	B3	3306	B3	9815	D5
2255	B5	3308	A2	9816	D5
2256	B4	3310	A2	9817	C5
2257	B4	3310	A3	9818	C4
2258	B3	3311	A4	9819	C4
2259	B3	3312	B3	9920	D4
2260	B3	3313	B4	9924	D4
2261	B3	3314	B4	9925	C5
2262	A3	3315	B4	9927	B6
2263	B3	3317	B3	9932	C5
2264	A3	3318	B3	9937	D5
2265	B2	3319	A3	M007	A4
2266	B2	3320	A3	M3	A1
2268	B3	3322	B2	TP12	A2
2269	B2	3606	C4	TP2	B3
2270	A3	3608	D4	TP3	B2
2271	A3	3615	C4	TP3A	A6
2272	A2	3631	C4	TP35	A7
2273	A2	3659	D4	TP36	A7
2274	A2	3668	D4	TP37	B4
2275	A2	3675	D5	TP4	B2
2276	A3	3677	C5	TP5	B5
2277	A3	3687	D4	TP6	B5
2281	B4	3688	D4	TP7	B4
2282	B4	3689	D4	TP8	B4
2283	B5	3693	D4	TP9	B4
2284	A2	3855	A9		
2285	A2	3865	A9		
2286	B2	3901	C5		
2287	B2	5012	D7		
2288	B4	5102	E7		
2289	B4	5104	D7		
2290	B4	5106	D7		
2291	B5	5138	A6		
2292	B5	5139	A6		
2293	B5	5177	A6		
2294	B5	5250	B3		
2296	A4	5251	C5		
2297	A4	5255	B4		
2298	B4	5258	B3		
2299	A4	5259	B3		
2300	B4	5284	B4		
2301	B2	5285	B4		
2302	A2	5286	B4		
2303	A2	5296	A4		
2304	A2	5320	A3		
2305	A2	5652	D5		
2306	A3	5653	D4		
2307	A3	8014	D7		
2309	B2	8050	B6		
2321	B2	8115	D6		
2353	D6	8116	D6		
2370	D4	8119	D6		
3010	D7	8120	D6		
3011	D7	8135	A8		
3012	D7	8170	A8		
3027	D6	8172	A5		
3028	D6	8306	A2		
3050	B6	8658	D4		
3052	B6	8677	C5		

1. Adjustments on the main panel (Fig. 7)

- | | |
|--|---|
| <p>1.1 +100V power supply voltage
Connect a voltmeter (DC) between pin 6 of connector M5 and ground. Adjust potentiometer 3535 for a voltage of +100V (14"-17") or +92,5V (21").</p> <p>1.2 Horizontal synchronization
Interconnect pins 8 and 28 of IC7015. Apply an aerial signal and tune the set. Adjust potentiometer 3356 until the picture is straight. Remove the interconnection.</p> <p>1.3 Horizontal centring
Is adjusted with potentiometer 3354.</p> <p>1.4 Vertical centring
Can be adjusted by eventually mounting one of the resistors 3401 or 3408.</p> <p>1.5 Picture height
Is adjusted with potentiometer 3410.</p> <p>1.6 Focussing
Is adjusted with the focussing potentiometer in the line output transformer (see Fig. 8).</p> <p>1.7 IF filter for PAL/SECAM BGLL'- or PAL/SECAM BGLL'I sets
Connect a signal generator (e.g. PM 5326) via a condensator 5p6 to pin 17 of the tuner and adjust the frequency for 33.4 MHz. Connect an oscilloscope to pin 1 of filter 1015. Switch on the set and select system Europe via the system button on the set. Adjust 5012 for a minimum amplitude.</p> <p>1.8 AFC</p> <p>a. Alignments for PAL/SECAM BGLL'- or PAL/SECAM BGLL'I sets
Connect a signal generator (e.g. PM 5326) as indicated in point 1.7 and adjust the frequency for 33.4 MHz. Tune the set in the VHF1 band at a tuning voltage of approx. 5V on pin 11 of the tuner. Select system France via the system button on the set. Connect a voltmeter to pin 21 of IC7015. Adjust 5040 for 6V (DC). Next adjust the frequency of the signal generator for 38,9 MHz. Select system Europe on the set. Adjust 5043 for 6V (DC).</p> <p>b. Alignment for PAL BG-, PAL/SECAM BG-, PAL/SECAM BGDK- or PAL I sets
Connect a signal generator (e.g. PM 5326) as indicated in point 1.7 and adjust the frequency for 38.9 MHz (PAL I: 39.5MHz). Connect a voltmeter to pin 21 of IC7015. Adjust 5040 for 6V (DC).</p> <p>1.9 RF AGC
If the picture of a strong local transmitter is reproduced distorted, adjust potentiometer 3021 until the picture is undistorted.</p> | <p>1.10 Chroma band
Connect a signal generator to pin 20 of the euro connector. Adjust frequency of signal generator to 500 kHz. Connect a voltmeter to pin 11 of IC7250 (+10V). Adjust 5259 for 10V. Remove the connection.</p> <p>1.11 Chroma subcarrier
Apply a PAL signal to pin 11 of IC7250. Adjust 5259 for a reading of 10V. Remove the connection.</p> <p>1.12 SECAM demodulation
Apply a SECAM signal to pin 11 of IC7250. Adjust 5259 for a reading of 10V. Remove the connection.</p> <p>1.13 The FM sound</p> <p>a. General adjustment
Apply a PAL signal whose frequency is 87.5 MHz. Set the generator to 87.5 MHz. Tune the set to 87.5 MHz. Europe. Adjust 513 for a minimum amplitude.</p> <p>b. Additional adjustment
After the general adjustment, adjust 513 for a minimum amplitude.</p> <p>1.14 The AM sound
Connect pin 21 of IC7015 to pin 11 of IC7250. Connect a voltmeter to pin 11 of IC7250. Connect a condensator 5p6 to pin 17 of the tuner. Connect a signal generator to pin 17 of the tuner. Tune the set to 30,9 MHz. First adjust 510 for a reading of 10V. Adjust the frequency of the signal generator to 30,9 MHz. Adjust 510 for a reading of 10V. Remove the connection.</p> |
|--|---|

2. Adjustments on the picture tube panel (Fig. 9)

2.2 Grey scale
Apply a test normal oper about 10 m desired grey

2.1 Cut-off points of picture tube

Apply a black pattern generator signal. Adjust contrast at minimum.
Adjust brightness until the DC voltage across potentiometer 3213 is 0V.
Adjust 3207, 3220 and 3234 for a black level of 125V on the collectors of transistors 7205, 7218 and 7227.
Adjust Vg2 potentiometer until the gun that first emits light is just no longer visible. Adjust the two other guns with the respective controls (3207, 3220 or 3234) until just no light will be visible.

Chroma band-pass filter for PAL/SECAM sets
Connect a signal generator (e.g. PM5326) to pin 20 of the euro connector and adjust it for a frequency of 4,286 MHz. Connect pin 8 of the euro connector and pin 27 of IC7250 to pin 13 of IC7250 (+12V). Connect an oscilloscope to pin 15 of IC7250.

Adjust 5259 for a maximum amplitude.
Remove the interconnections.

Chroma subcarrier oscillator

Apply a PAL colour-bar pattern. Interconnect pin 11 of IC7260 (TDA4510) or pin 17 of IC7250 (TDA4650) to ground. Adjust 2265 so that colour pattern on the screen is practically stationary.
Remove the interconnection.

SECAM demodulators for PAL/SECAM sets

Apply a SECAM black pattern. Connect an oscilloscope to pin 1 of IC7250. Adjust 5320 for 0 reading.

Connect the oscilloscope to pin 3 of IC7250. Adjust 3320 for 0 reading.

The FM sound section

General adjustments

Apply a PAL BG (PAL I for PAL I sets) generator signal whose sound carrier is (FM) modulated with a frequency of 1 kHz.

Set the generator to the mono mode.

Tune the set and select, if possible, system Europe.

Adjust 5138 for maximum sound output.

Additional adjustment for PAL/SECAM BGDK sets

After the general adjustment (see point a.) put the generator in SECAM DK position.

Adjust 5139 for maximum sound output.

The AM sound section for PAL/SECAM BGLL' or PAL/SECAM BGLL'I sets

Connect pin 3 of IC7125 to a fixed voltage level of +2V by means of an adjustable power supply.

Connect a signal generator (e.g. PM 5326) via a condenser 5p6 to pin 17 of the tuner and adjust the frequency for 32,4 MHz. Modulate (AM) the signal with 1 kHz.

Tune the set in the UHF band and select system France.

First adjust 5106 for maximum sound output. Next adjust 5104 for maximum sound output.

Adjust the frequency of the signal generator for 30,9 MHz. and modulate (AM) the signal with 1 kHz.

Adjust 5102 for minimum sound output.

Remove the power supply connection.

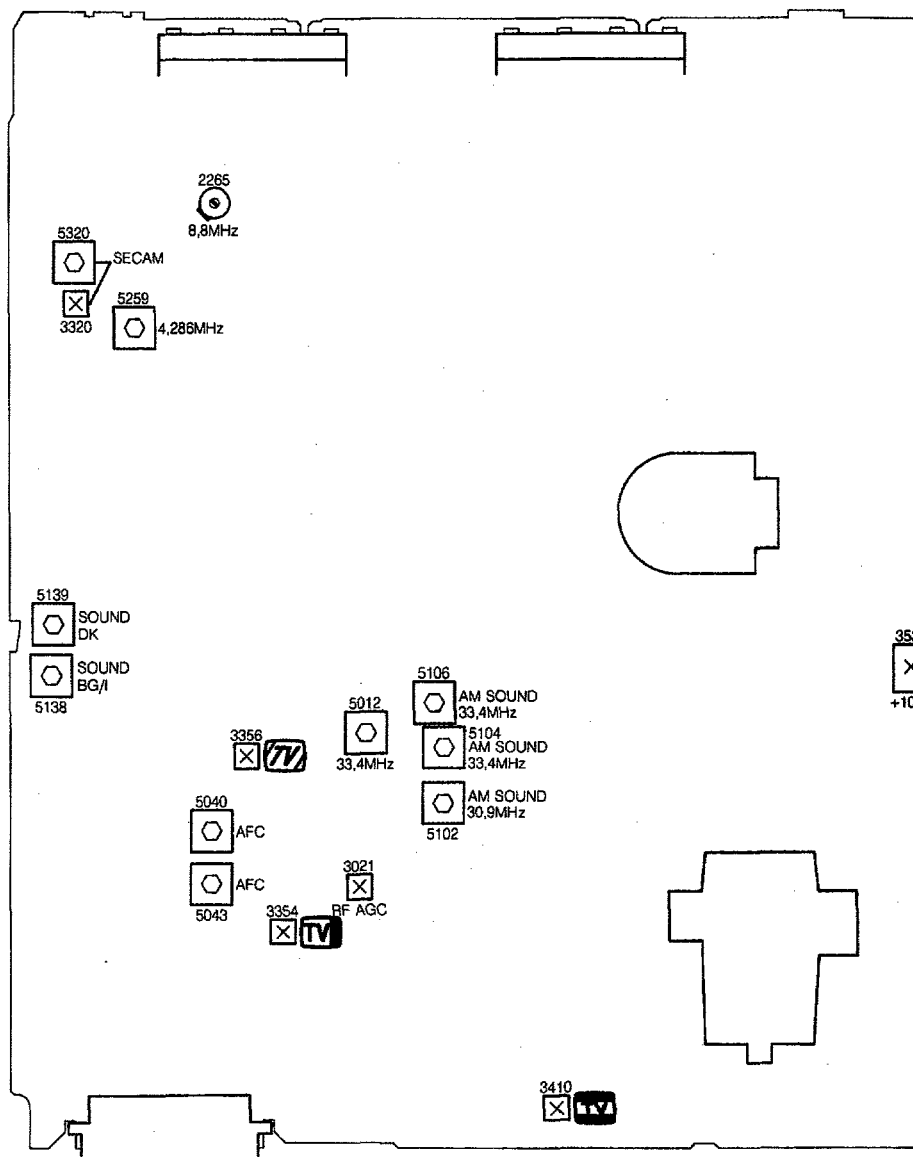


Fig. 7

2 Grey scale	ERROR MESSAGE	ERROR DESCRIPTION
Apply a test pattern signal and adjust the set for normal operation. Allow the set to warm up for about 10 minutes. Adjust 3213 and 3214 until the desired grey scale has been obtained.	Flashing LED	Internal μ C error
	F2 + Flashing LED	EEPROM error

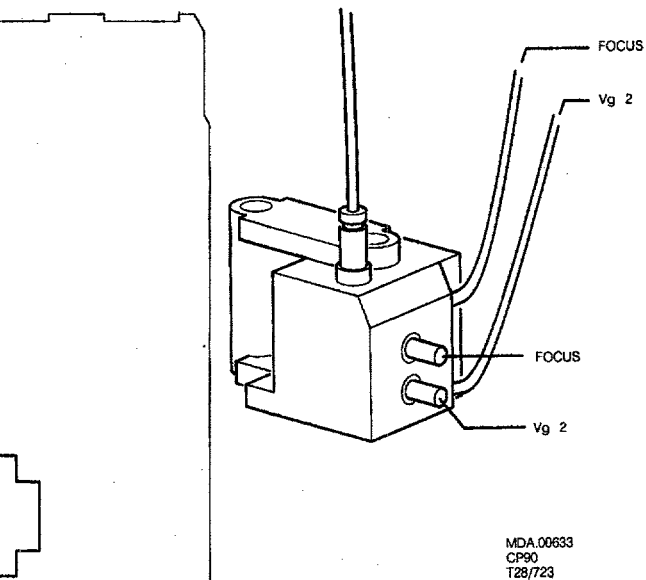


Fig. 8

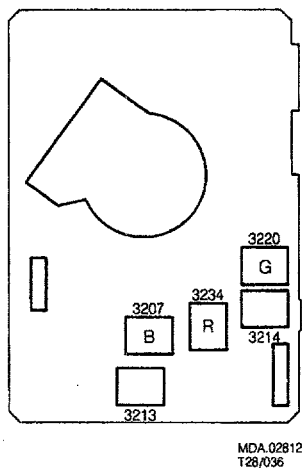
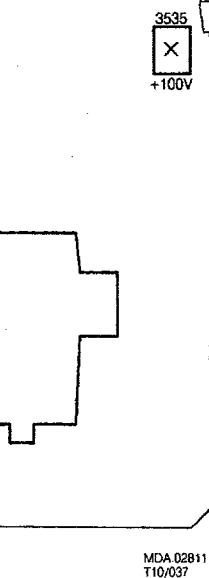




Fig. 9

List of error messages

ERROR MESSAGE	ERROR DESCRIPTION	POSSIBLE DEFECTIVE COMPONENT
Flashing LED	Internal μ C error	IC7600
F2 + Flashing LED	EEPROM error	IC7685

5286	4822 157 60141	3,3 μ H	6521	4822 130 42488	BYD33D	7537	5322 130 60159	BC848B
5296	4822 157 51462	10 μ H	6522	4822 130 30621	1N4148	7552	4822 130 42155	BC327A
5320	4822 157 52808	10 μ H	6523	4822 130 80446	LL4148	7553	5322 130 42012	BC858A
5320	4822 157 52808	10 μ H	6530	4822 130 82033	BYD34J	7554	4822 130 42032	BC337A
5441	4822 146 21116	LOT DRIVER	6537	4822 130 34167	BZX79-F6V2	7555	5322 130 60159	BC848
5445	4822 140 10406	LOT AT2079/40	6540	4822 130 42488	BYD33D	7556	4822 130 60136	BC856
5447	4822 157 62766	262LYF-0095K	6545	4822 130 42488	BYD33D	7561	4822 130 40823	BD135
5449	4822 158 10551	27 μ H	6549	4822 130 80446	LL4148	7563	5322 130 42012	BC858
5452	4822 157 51157	3,3 μ H	6554	4822 130 42489	BYD33G	7571	4822 130 61207	BC848
5453	4822 157 51462	10 μ H	6555	4822 130 82305	LLZ-F18	7600	4822 209 63948	TMP47C434N3122
5454	4822 156 21332	LINEARITY COIL	6557	4822 130 80887	LLZ-F36	7605	4822 209 73852	PMBT2369
5500	4822 212 22978	MAINSFILTER	6558	4822 130 80887	LLZ-F36	7654	4822 130 61207	BC848
5515	4822 157 50963	2,2 μ H	6559	4822 130 80887	LLZ-F36	7658	5322 130 42136	BC848C
5525	4822 148 81121	SOPS TRF	6562	4822 130 80905	LLZ-F5V1	7665	4822 130 61207	BC848
5529	4822 157 63411	68 μ H	6565	4822 130 81252	LLZ-F4V7	7670	4822 130 61207	BC848
5530	4822 157 63411	68 μ H	6568	4822 130 81147	LLZ-F6V2	7672	4822 130 61207	BC848
5531	4822 158 10551	27 μ H	6569	4822 130 80446	LL4148	7674	4822 130 61207	BC848
5532	4822 157 51157	3,3 μ H	6570	4822 130 20245	SFOR5D43	7685	4822 209 62098	ST24C02AB1
5541	4822 156 20966	47 μ H	6573	4822 130 80446	LL4148	7686	4822 130 61207	BC848
5545	4822 157 51195	1 μ H	6602	4822 130 82037	HZT33	7675	4822 130 61207	BC848
5554	4822 157 51157	3,3 μ H	6603	4822 130 80446	LL4148	7676	4822 130 61207	BC848
5560	4822 157 51462	10 μ H	6604	4822 130 80446	LL4148	7677	4822 130 61207	BC848
5601	4822 157 51462	10 μ H	6605	4822 130 80446	LL4148			
5652	4822 157 51462	10 μ H	6658	4822 130 80446	LL4148			
5653	4822 157 51462	10 μ H	6679	4822 130 80446	LL4148			
5677	4822 157 53906	47 μ H	6849	4822 130 30621	1N4148			
			6850	4822 130 80446	LL4148			
6014	4822 130 80888	BA682	6851	4822 130 80446	LL4148			
6020	4822 130 81223	LLZ-C2V4	6852	4822 130 80446	LL4148			
6034	4822 130 80446	LL4148	6853	4822 130 80446	LL4148			
6042	4822 130 80888	BA682	6854	4822 130 80446	LL4148			
6050	4822 130 30621	1N4148	6855	4822 130 80446	LL4148			
6051	4822 130 30621	1N4148	6865	4822 130 30621	1N4148			
6052	4822 130 30621	1N4148						
6053	4822 130 80446	LL4148	7002	4822 209 10892	LA7910			
6115	4822 130 80888	BA682	7015	4822 209 63107	TDA4504B/N1B			
6116	4822 130 80888	BA682	7027	4822 130 61207	BC848			
6119	4822 130 80888	BA682	7030	4822 130 61207	BC848			
6120	4822 130 80888	BA682	7038	4822 130 61207	BC848			
6135	4822 130 80883	LLZ-C4V7	7125	4822 209 63105	TDA3843/V2			
6170	4822 130 80888	BA682	7135	4822 209 30278	TDA3827/V3			
6172	4822 130 80888	BA682	7156	4822 130 61207	BC848			
6205	4822 130 80446	BAS32L	7157	4822 209 60956	TDA7052/N1			
6218	4822 130 80446	BAS32L	7158	4822 130 61207	BC848			
6227	4822 130 80446	BAS32L	7170	4822 130 61207	BC848			
6289	4822 130 80446	BAS32L	7205	4822 130 41782	BF422			
6306	4822 130 80954	LLZ-C5V6	7218	4822 130 41782	BF422			
6370	4822 130 82304	LLZ-F12	7221	4822 209 63108	TDA4660/V2			
6415	4822 130 80446	LL4148	7225	5322 130 42012	BC858			
6416	4822 130 42488	BYD33D	7227	4822 130 41782	BF422			
6443	5322 130 31938	BYV27-200	7250	4822 209 30011	TDA4650/V4			
6446	4822 130 32896	BYD33M	7250	4822 209 30011	TDA4650/V4			
6449	5322 130 32967	BYV26B	7251	4822 130 61207	BC848			
6451	4822 130 42488	BYD33D	7251	4822 130 61207	BC848			
6452	4822 130 42488	BYD33D	7255	4822 130 42696	BC818-25			
6470	4822 130 42488	BYD33D	7256	4822 130 61207	BC848			
6502	4822 130 81497	1N4005GP	7256	4822 130 61207	BC848			
6503	4822 130 81497	1N4005GP	7280	4822 209 63104	TDA3504/V1			
6504	4822 130 81497	1N4005GP	7290	4822 130 42134	BC858BR			
6505	4822 130 81497	1N4005GP	7400	4822 209 60955	TDA3653B/N1			
6511	4822 130 80446	LL4148	7440	4822 130 41782	BF422			
6513	4822 130 80446	LL4148	7445	4822 130 42679	BUT11AF			
6514	4822 130 80446	LL4148	7512	5322 130 42136	BC848C			
6515	4822 130 80446	LL4148	7514	4822 130 82034	CNX83A			
6516	4822 130 80886	LLZ-F22	7515	4822 130 42513	BC858C			
6517	4822 130 31456	BZV85-C5V1	7516	5322 130 44349	BC635			
			7525	4822 130 42679	BUT11AF			